



 
# 1:18 Full Proportional Remote Control Drive Monster Truck



Caution: This model is not a toy, it is designed for user over 14 years of age. Please use this instruction and the R/C system instruction at the same time. The instruction is suitable for a type of model whose number is A959-B.

### Safety and Cautions

- \*Never run the model on public roads or streets as it could endanger traffic.
- \*Never run the model in crowded areas near or toward people or animals to prevent property damage and personal injury.
- \*Never run the model near rivers, ponds or lakes as to prevent R/C car from dropping into the water.
- \*Make sure that no one else is using the same frequency as yours in your running area. Using the same frequency at the same time, whether it is driving, flying or sailing, can cause loss of control with R/C model resulting in serious accidents.
- \*To avoid a runaway R/C model or loss of control always follow the procedure below:
  1. Fully extend transmitter antenna.
  2. Switch on transmitter.
  3. Switch on R/C model.
- \*Follow reverse procedure to shut down.
- \*Never touch or hinder rotating tire.
- \*Never run R/C model in the rain or let run over puddles as water may cause trouble with R/C model.
- \*Motor and battery get very hot after running. Take care when handle them.
- \*Reset transmitter antenna when not in use.
- \*Remove the batteries from model and transmitter when they are not in use.

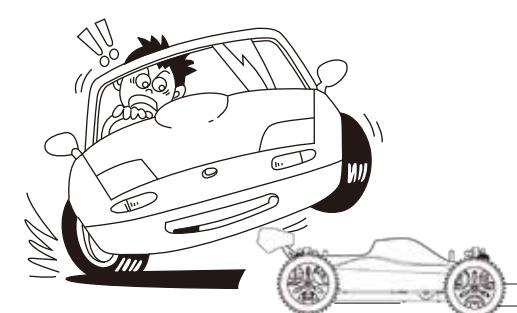

### Cautions when handling batteries

- \*Do not dismantle the battery or charger and do not cut any battery cables. This may cause short-circuit and/or damage to the product.
- \*Change battery with compatible charger following proper procedure that is called out in the instructions. Do not modify charger or charge battery in improper way.
- \*Do not recharge battery that is still warm from use as it may damage the battery. Allow the battery to cool off prior to recharging.
- \*Make sure to disconnect charger cables from R/C model and electric outlet when not in use.
- \*Remove transmitter battery when not using it for a long time as it may leak and damage transmitter when left for a long period.
- \*Never incinerate used batteries as they can explode causing serious accidents.



 
### Safety precautions

Do not operate the model on public roads in crowded places or near infants, it may cause accidents or injury.

As the product includes steel and sharp parts, assemble and store this product only in places out of the reach of children.

As the front end of the antenna may be dangerous, do not aim it toward faces.

During the car running and after the motor will be hot. Please do not touch it until it has had time to cool down.

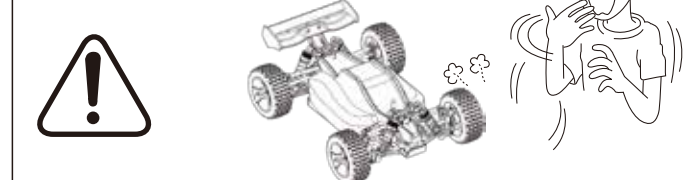

1

### Troubleshooting

Description	Cause	Solution
The car does not operate at all.	Transmitter or receiver is off. Batteries are not placed properly in the transmitter. The drive battery is not charged enough.	Turn on both transmitter and receiver. Place batteries in the transmitter properly. Charge the drive battery.
The car does not follow your operation and control distance not enough long.	Someone else is using the same radio frequency as you are using. There is not enough power in the transmitter or receiver batteries.	Charge your radio frequency to the one no one else is using, wait until the driver using the same radio frequency finishes driving or drive your car at a different place. Replace the transmitter batteries with new ones and charge the drive battery.
Not lighten antenna on the transmitter/ hot fully extend antenna.		Make sure insert antenna into the transmitter and fully extend antenna.

### CAUTION

- \* Please observe the operation manual or packing explanation to install and use, and some parts should be installed by adults.
- \* The product contains small part. It may cause swallow or choke.
- \* Never run an R/C model in the sleeper or car's mattress areas or it may cause the parts malfunction.
- \* Please throw the wrapper in time to avoid danger for the children.
- \* Regularly examine for damage to the charge wire, plug, bodyshell or other parts in the event of any damage. It must not be used until the damage has been repaired.
- \* The charge battery box and battery must insert with the appointed power source of product symbol same.
- \* This product must only be used with the original collocation charger.
- \* The product is contains the functional outdoors are may be dangerous to the children.
- \* Apart the charger and toy before clean.
- \* As the front end of the antenna may be dangerous, do not aim it toward anyone's body, face or eyes.
- \* Batteries are to be inserted with the correct polarity.
- \* Use the "AA" non-rechargeable or "AA" rechargeable batteries.
- \* Non-rechargeable batteries are not to be recharged.
- \* Rechargeable batteries should only be charged under adult supervision.
- \* Rechargeable batteries must be removed from model before charge.
- \* Different types of batteries or old and new batteries are not to be mixed.
- \* Exhausted batteries are to be removed in time.
- \* The supply terminals are not to be short-circuited.
- \* Never short circuit the batteries, throw it in a fire or attempt to open their outer casings.
- \* Please remove the batteries when not in use.
- \* Please retain these instructions for future reference.

### Product Introduction

Item number: A959-B 1:18 Full proportional remote control 4WD off-road vehicle  
 Vehicle size: length 245\* width 175\* height 94MM  
 Wheelbase: 165MM  
 Wheelspan: 105MM  
 Wheel diameter: 61MM Wheel width: 28MM  
 Transmitter battery: 4\*AA  
 Car battery: 7.4V1400MAH  
 Charge time: 2.5 hours  
 Playing time: About 6 minutes  
 Control distance: 100Aabove  
 Motor: 540

Speed: 70KM/Habove  
 Serve: 17G  
 Four wheel independent suspension,  
 With front and rear differential

 
2

### Proportional R/C Using Instruction

- Turn left the steering wheel, the car will turn left. Turning left angle can be adjusted by the degree of wheel twisting.
- Turn right the steering wheel, the car will turn right. Turning right angle can be adjusted by the degree of wheel twisting.
- Pull the throttle trigger backward, the car will forward. Adjusting the angle of throttle trigger can adjust forward speed of the car. During the car forward, quickly push the trigger forward to stop it.
- Loosen the trigger to make it return the neutral position when brake. Push the throttle trigger forward, the car will backward. Adjusting forward angle of throttle trigger adjust backward speed of the car.

### Introduce the common tools and assemble the electron parts

#### Tools needed for assembly

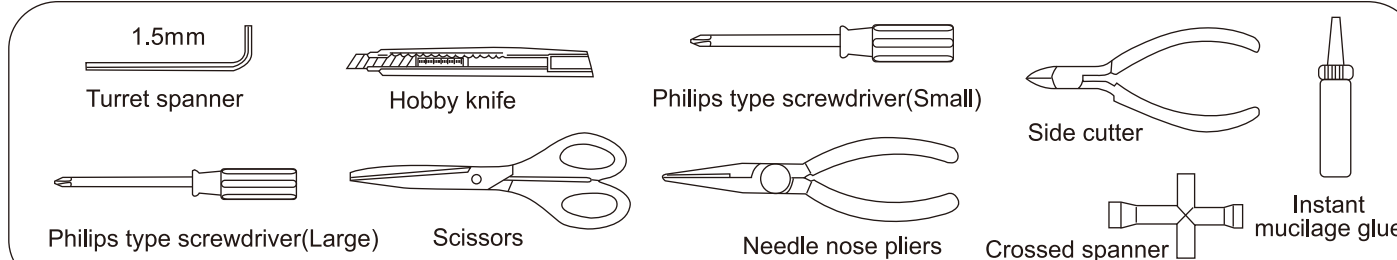


#### Charge caution

#### CHARGING BATTERY

- Please firstly check and confirm input voltage of the charge is consistent with local voltage output voltage of the charge is consistent with battery voltage.
- Battery must be used up before you charge. Charging time is not more than 2.5 hours.
- Be careful to make sure there is adult to control when charging.

3

 
### Assemble the electron parts

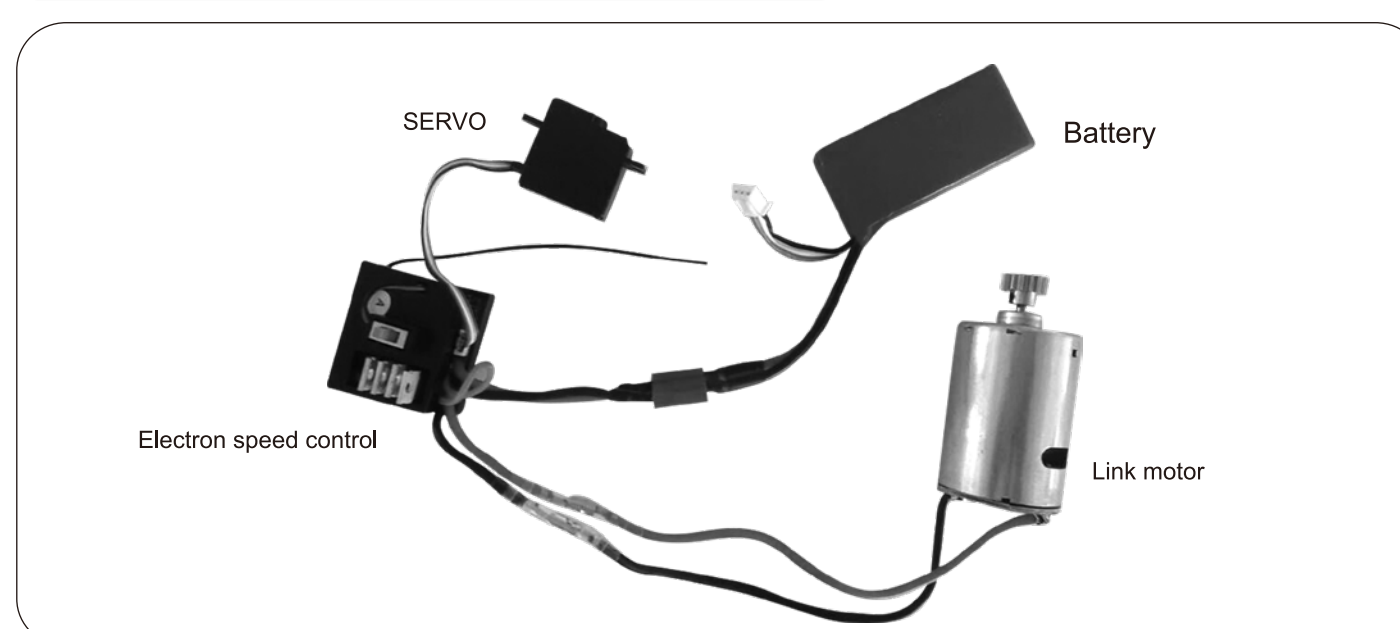

### PRACTICE AND MAINTENANCE


#### Operating program

 - Turn on the switch of transmitter and make sure the power indicator is steady light, then turn on the car.
- Slit the trigger of transmitter slowly, you can observe the car whether it can go ahead or go back.
- Turn steering adjusting wheel of transmitter to left or right, and make sure the steering of front wheels follow the instruction.
- Put the car on the ground and stand behind the back of the car. Squeeze the throttle trigger gently. If the car does not move in a straight line, you can adjust the trim of transmitter until the car moves in a straight line.
- Ok, ready to run.

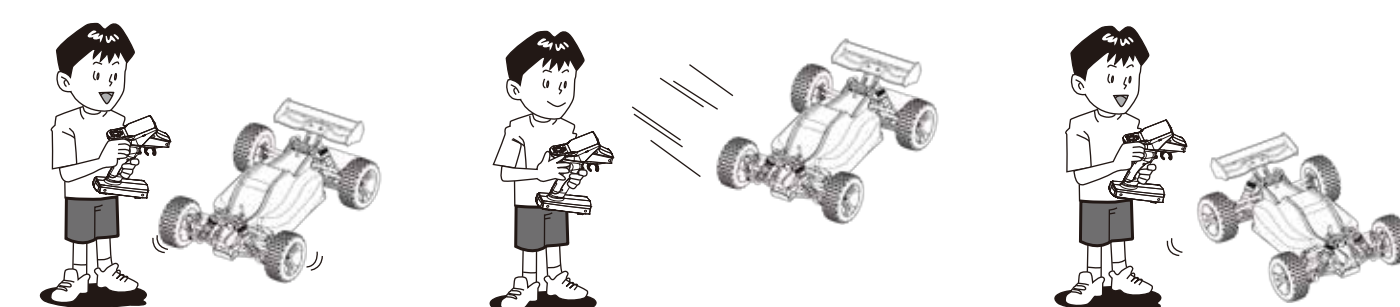


4

### Practice

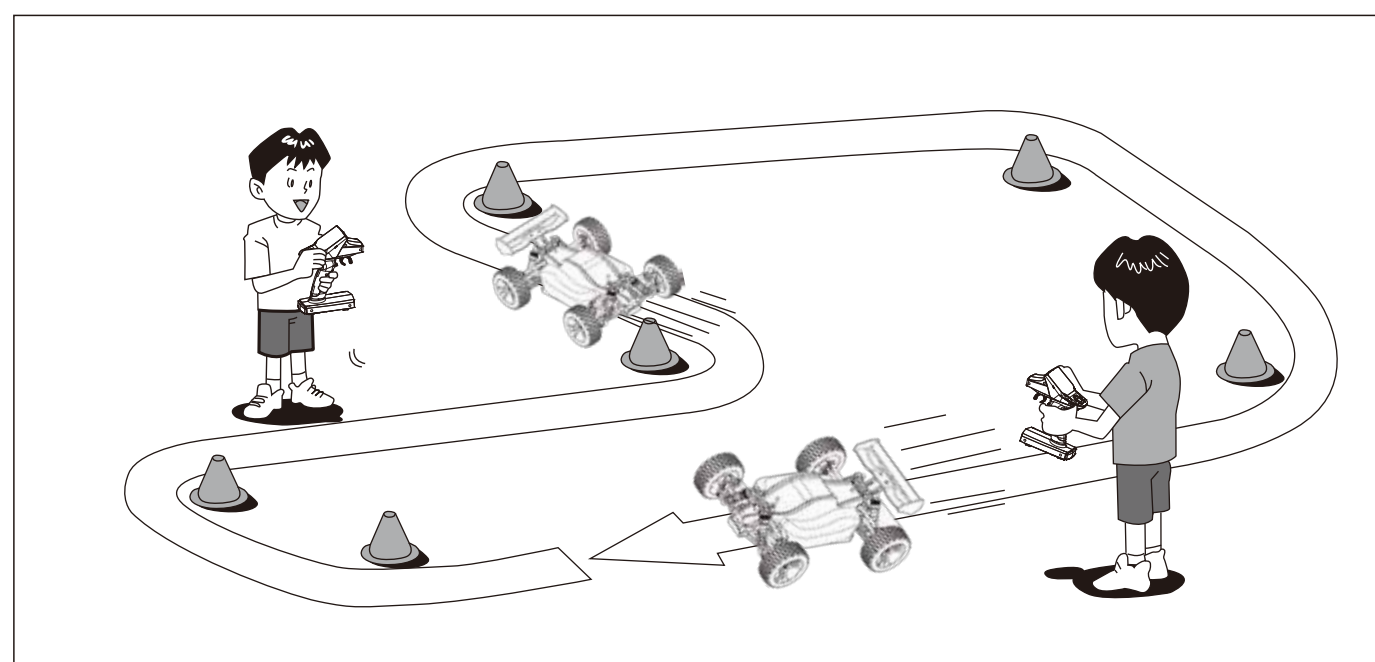 


Let's practice! Make R/C car circuit at a wide and safe location using corner pylons (separately available), empty cans or such. Running fast at straight section and slow down at curved section is a basic speed control technique useful when driving R/C car.

### Maintain

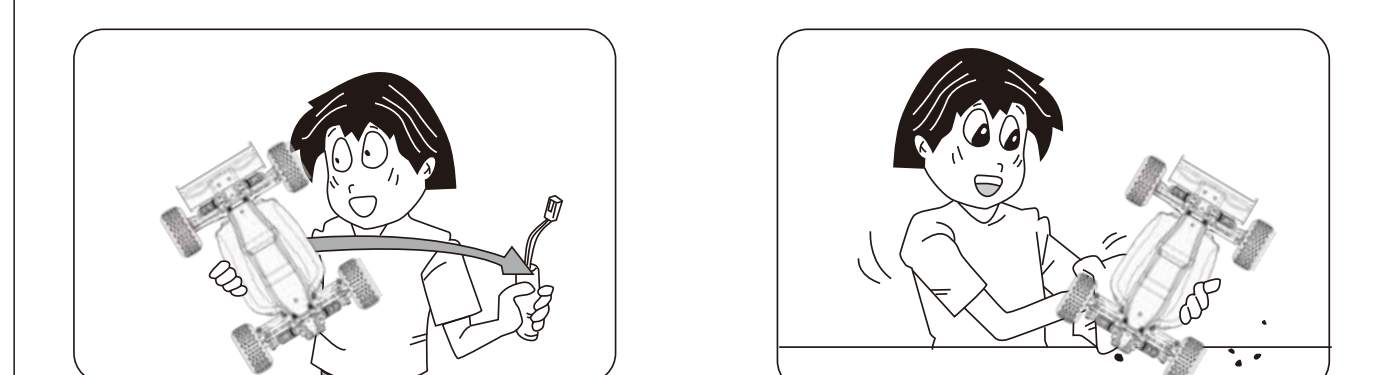 

When the car is not in use, you should remove the battery from the car.

 Completely remove sand, mud, dirt etc.

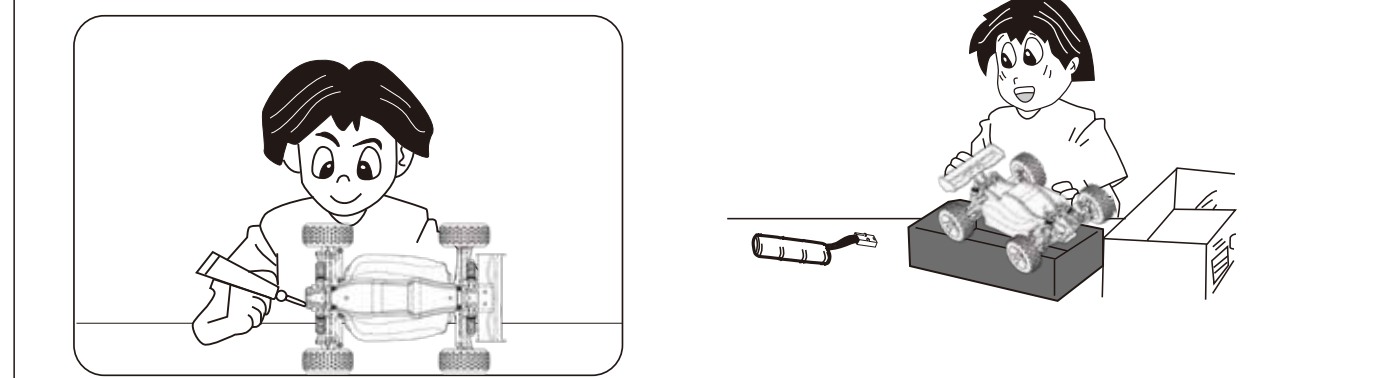


Metal outside should apply the rust prevention oil.

Store the car and batteries separately when not in use.

5

### Assembly Exploded Diagram

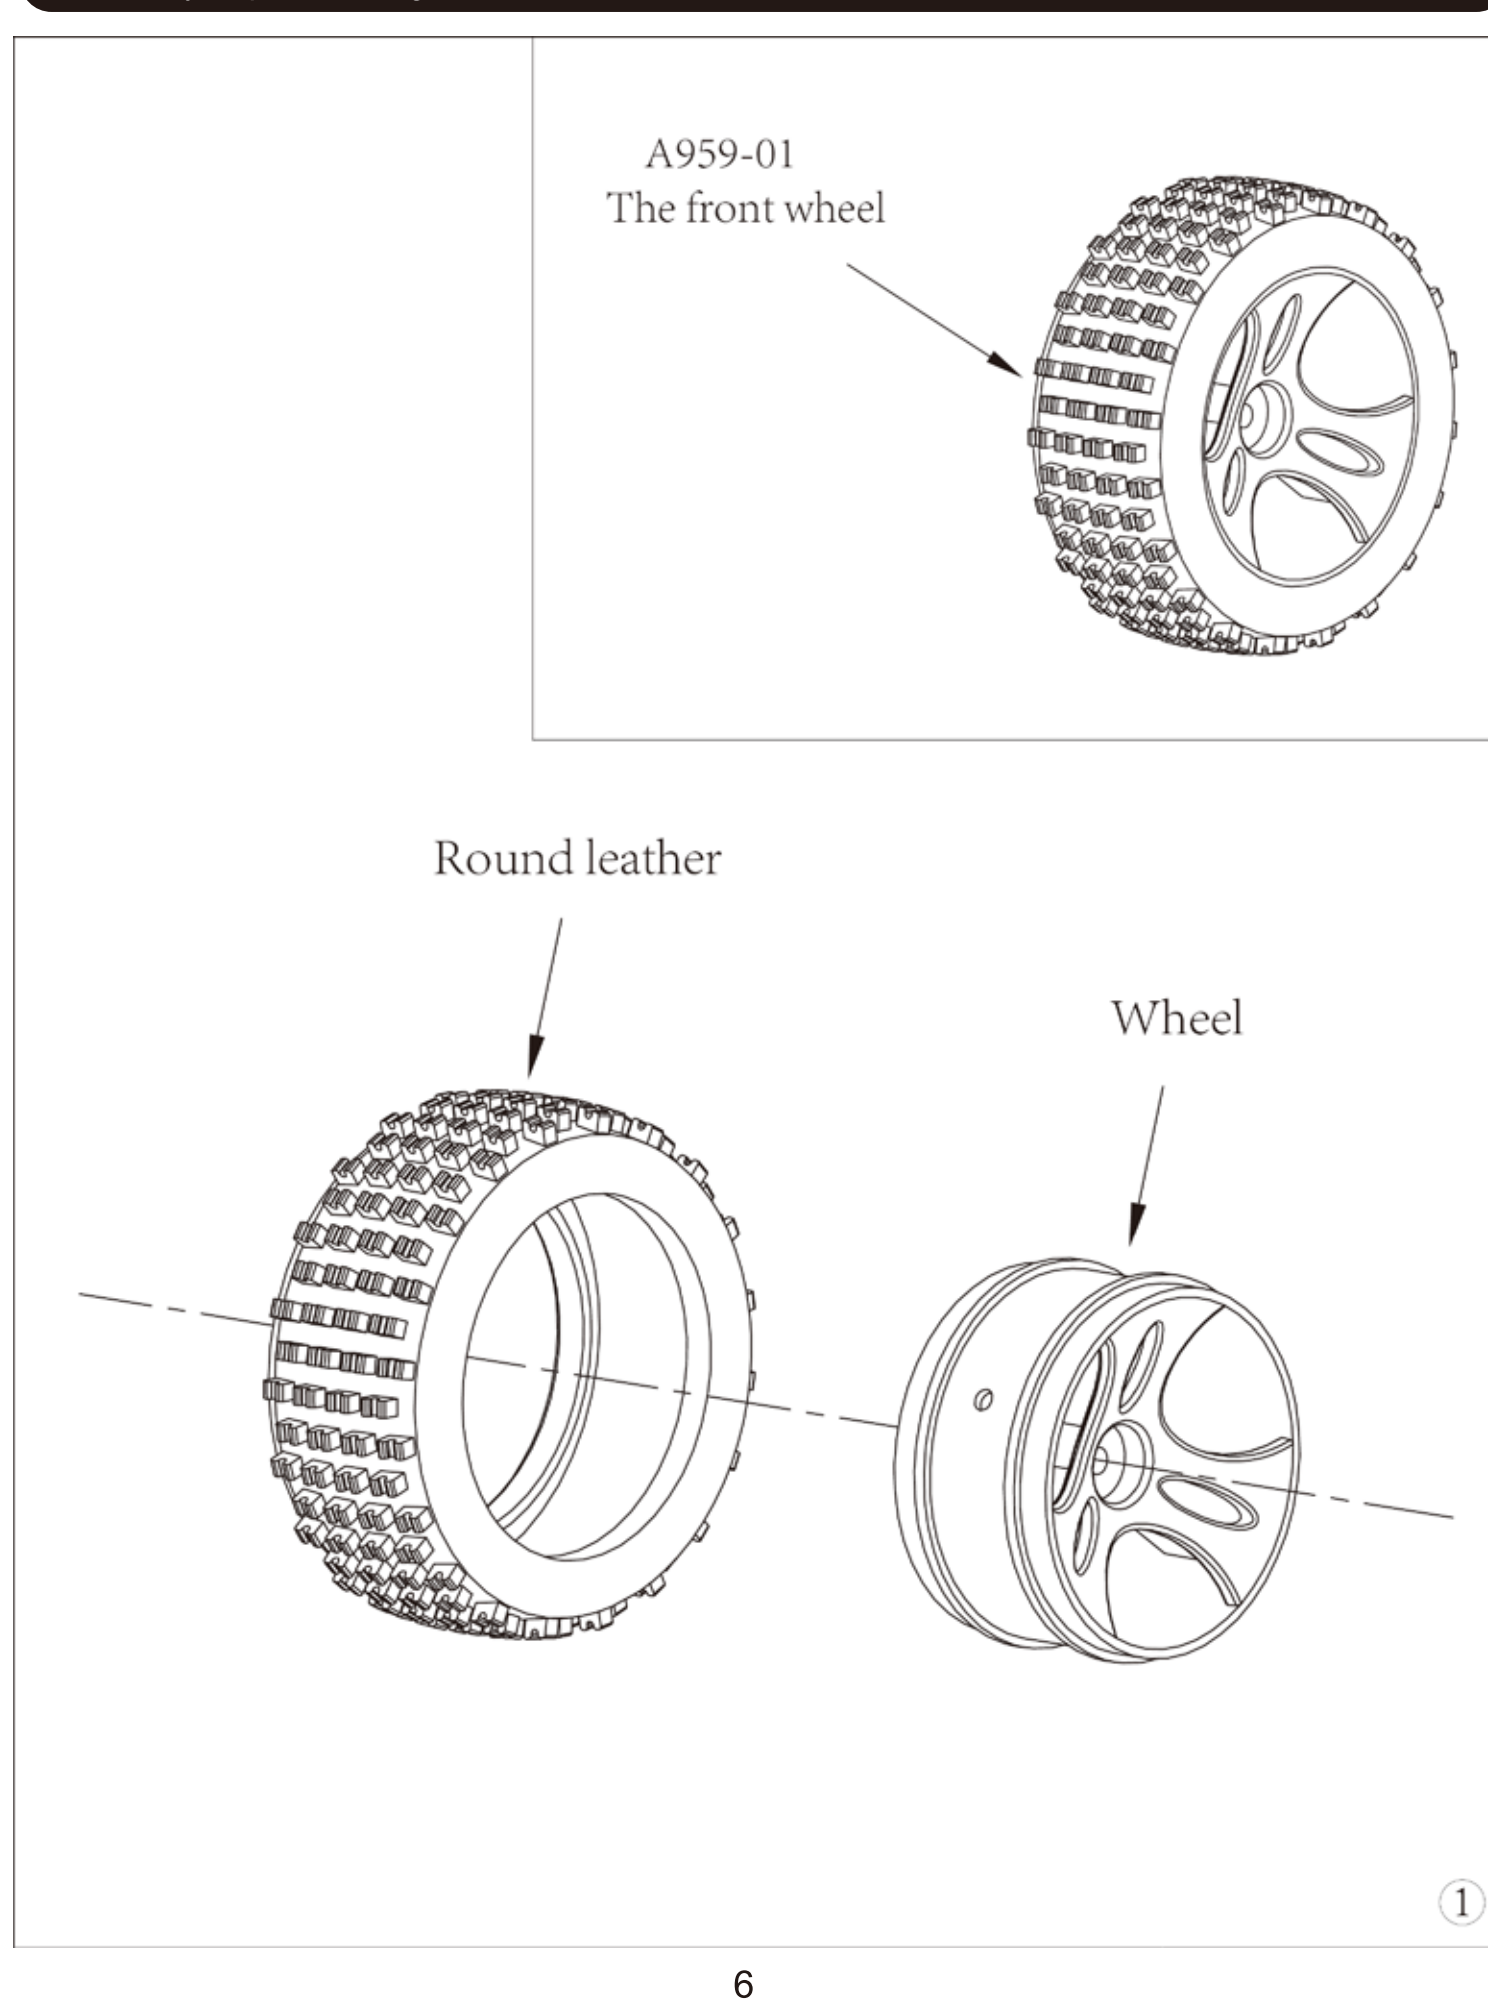 


A959-01  
The front wheel

Round leather

Wheel

 6

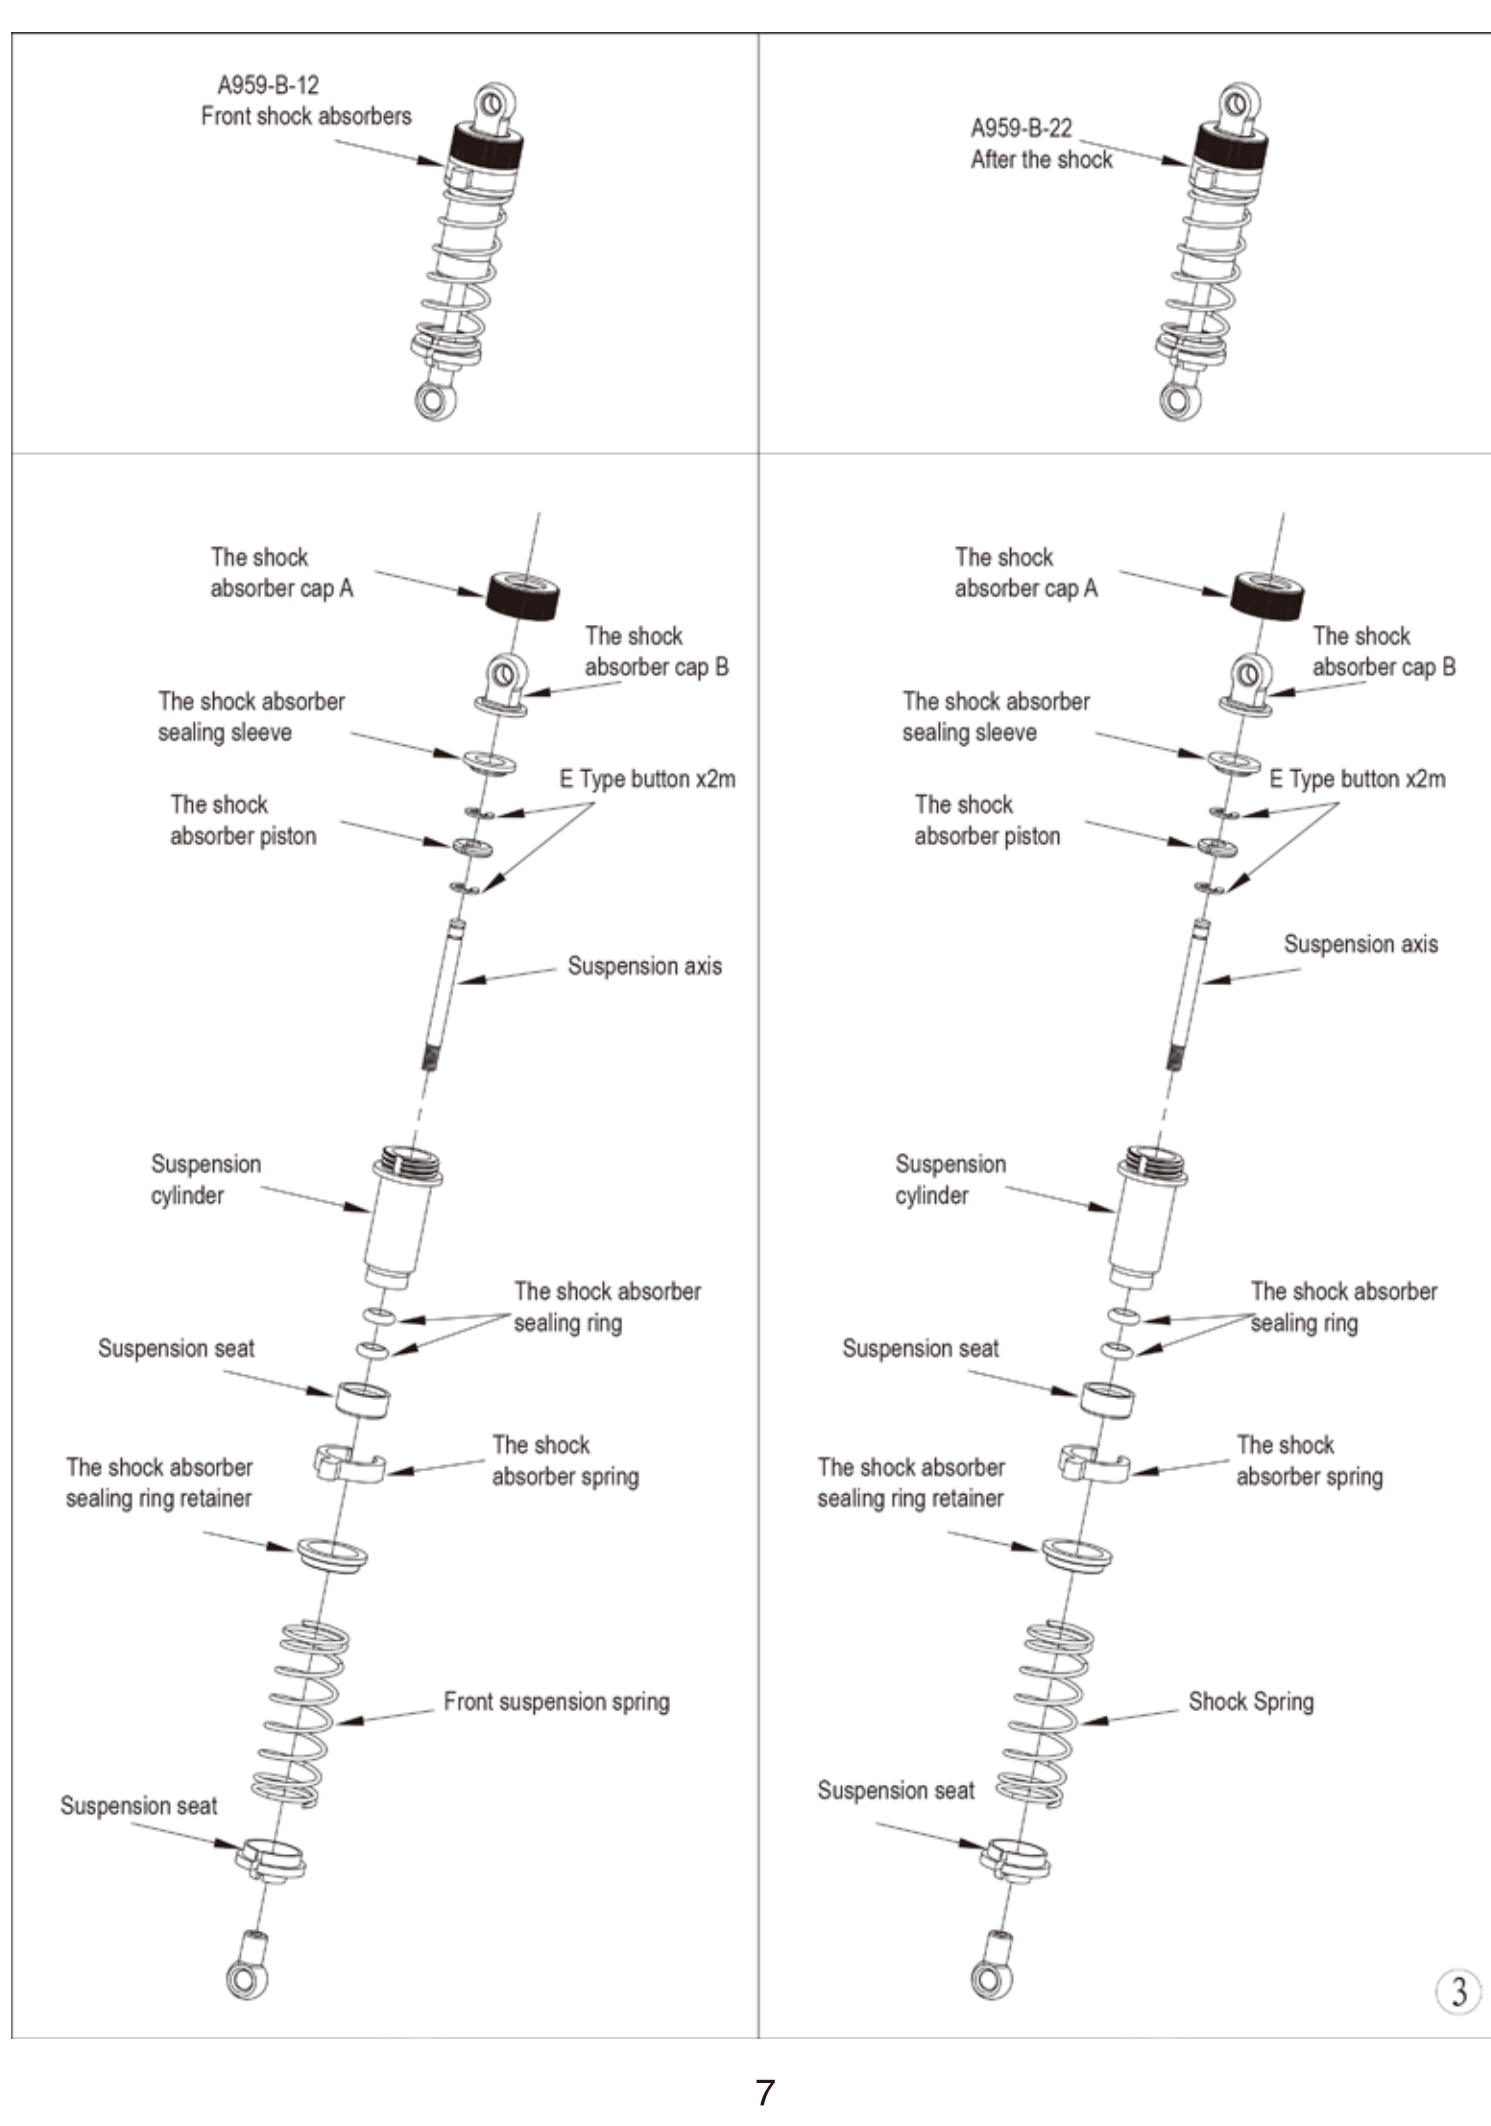

A959-B-12  
Front shock absorbers

A959-B-22  
After the shock

The shock absorber cap A

The shock absorber cap B

The shock absorber sealing sleeve

The shock absorber sealing sleeve

The shock absorber piston

The shock absorber piston

E Type button x2m

E Type button x2m

Suspension axis

Suspension axis

Suspension cylinder

Suspension cylinder

Suspension seat

Suspension seat

The shock absorber sealing ring

The shock absorber sealing ring

The shock absorber sealing ring retainer

The shock absorber sealing ring retainer

 
Front suspension spring

Shock Spring

Suspension seat

Suspension seat

7

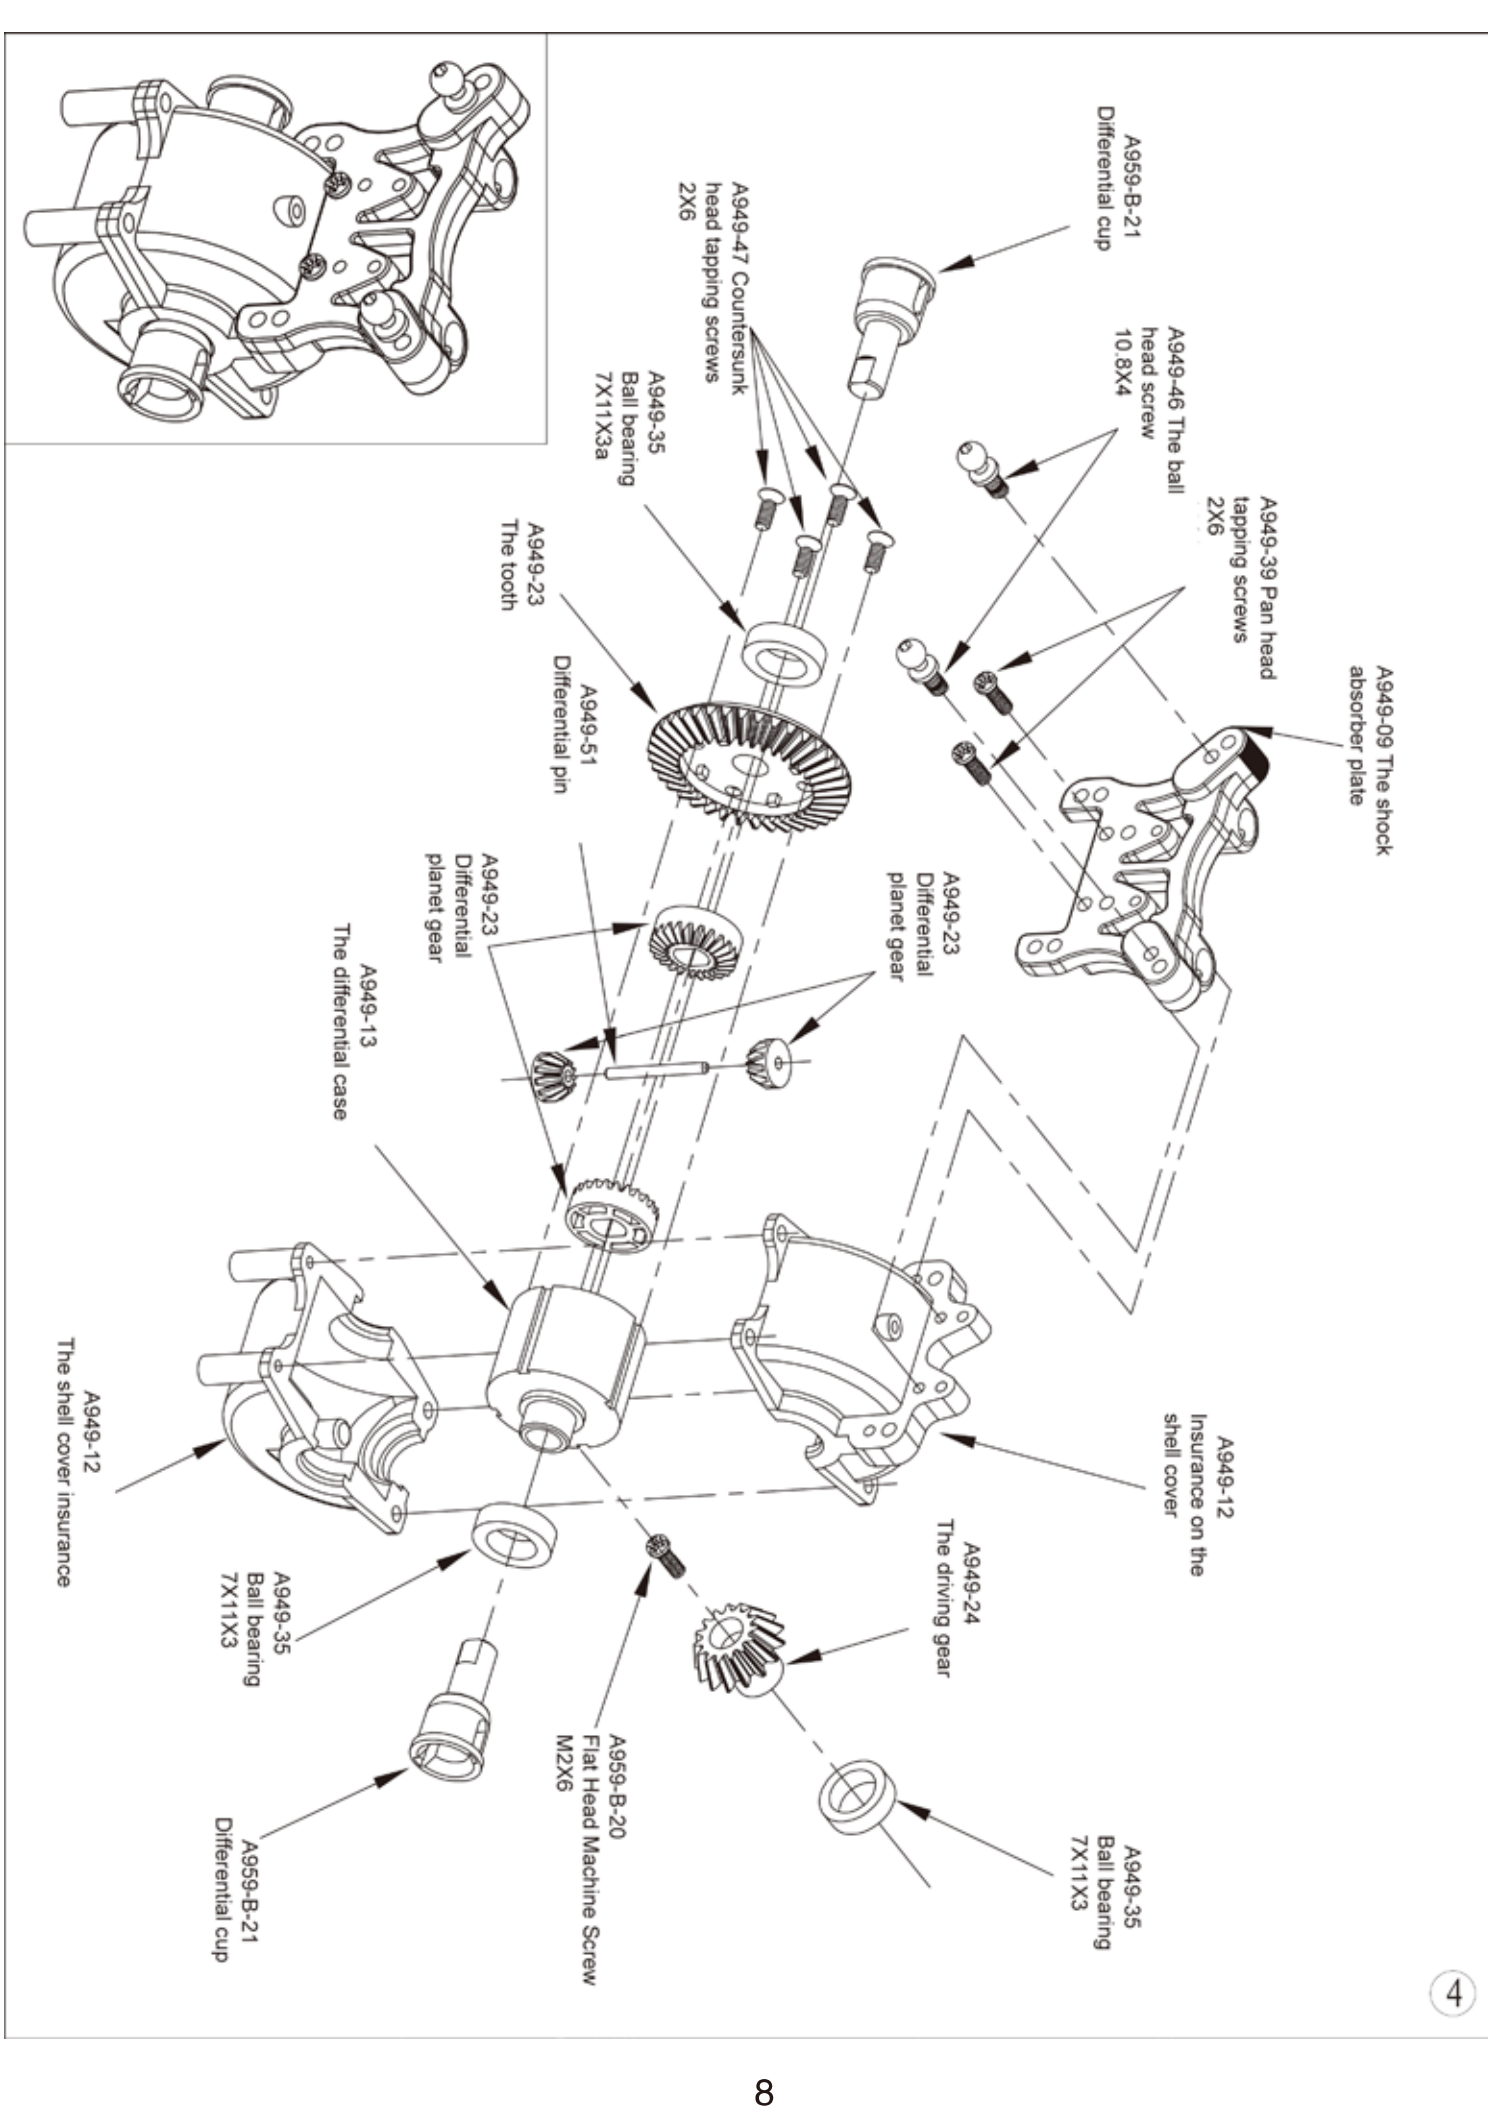

A959-B-21  
Differential cap

A959-B-21  
Head bearing 10.0x6

A959-B-21  
Head bearing 10.0x6

A959-B-21  
Head bearing 10.0x6

A959-B-21  
Head bearing 10.0x6

A959-B-21  
Head bearing 10.0x6

A959-B-21  
Head bearing 10.0x6

 
A959-B-21  
Head bearing 10.0x6

A959-B-21  
Head bearing 10.0x6

A959-B-21  
Head bearing 10.0x6

A959-B-21  
Head bearing 10.0x6

8

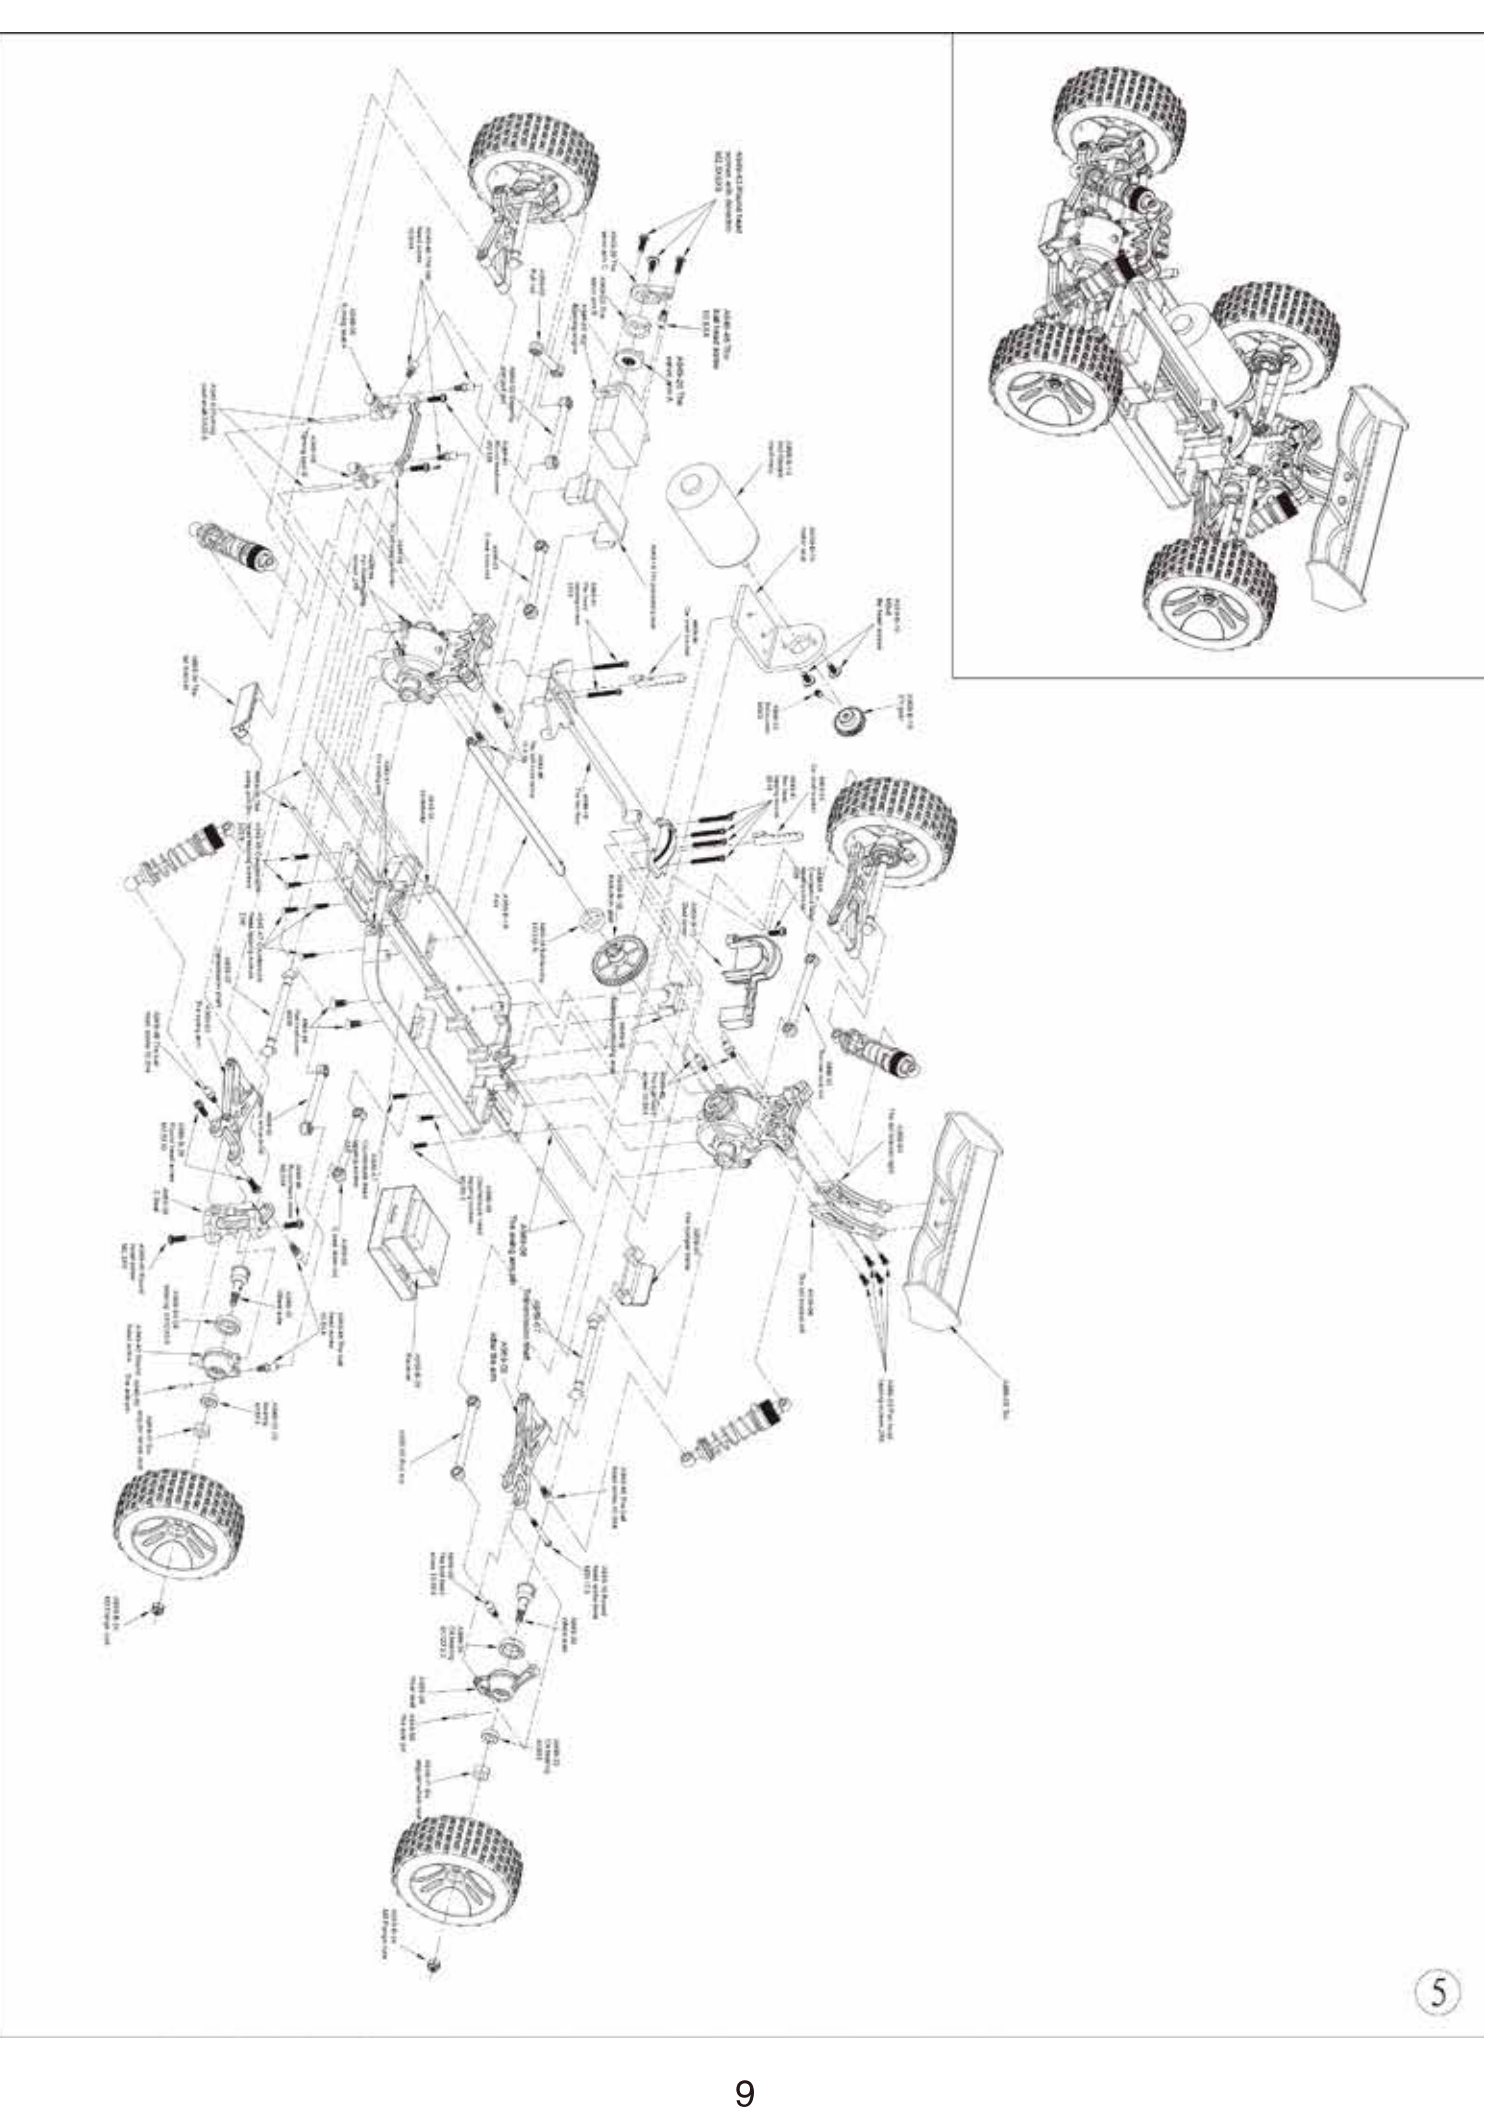

A959-B-21  
Differential cap

A959-B-21  
Head bearing 10.0x6

A959-B-21  
Head bearing 10.0x6

A959-B-21  
Head bearing 10.0x6

 
A959-B-21  
Head bearing 10.0x6

A959-B-21  
Head bearing 10.0x6

A959-B-21  
Head bearing 10.0x6

A959-B-21  
Head bearing 10.0x6

9

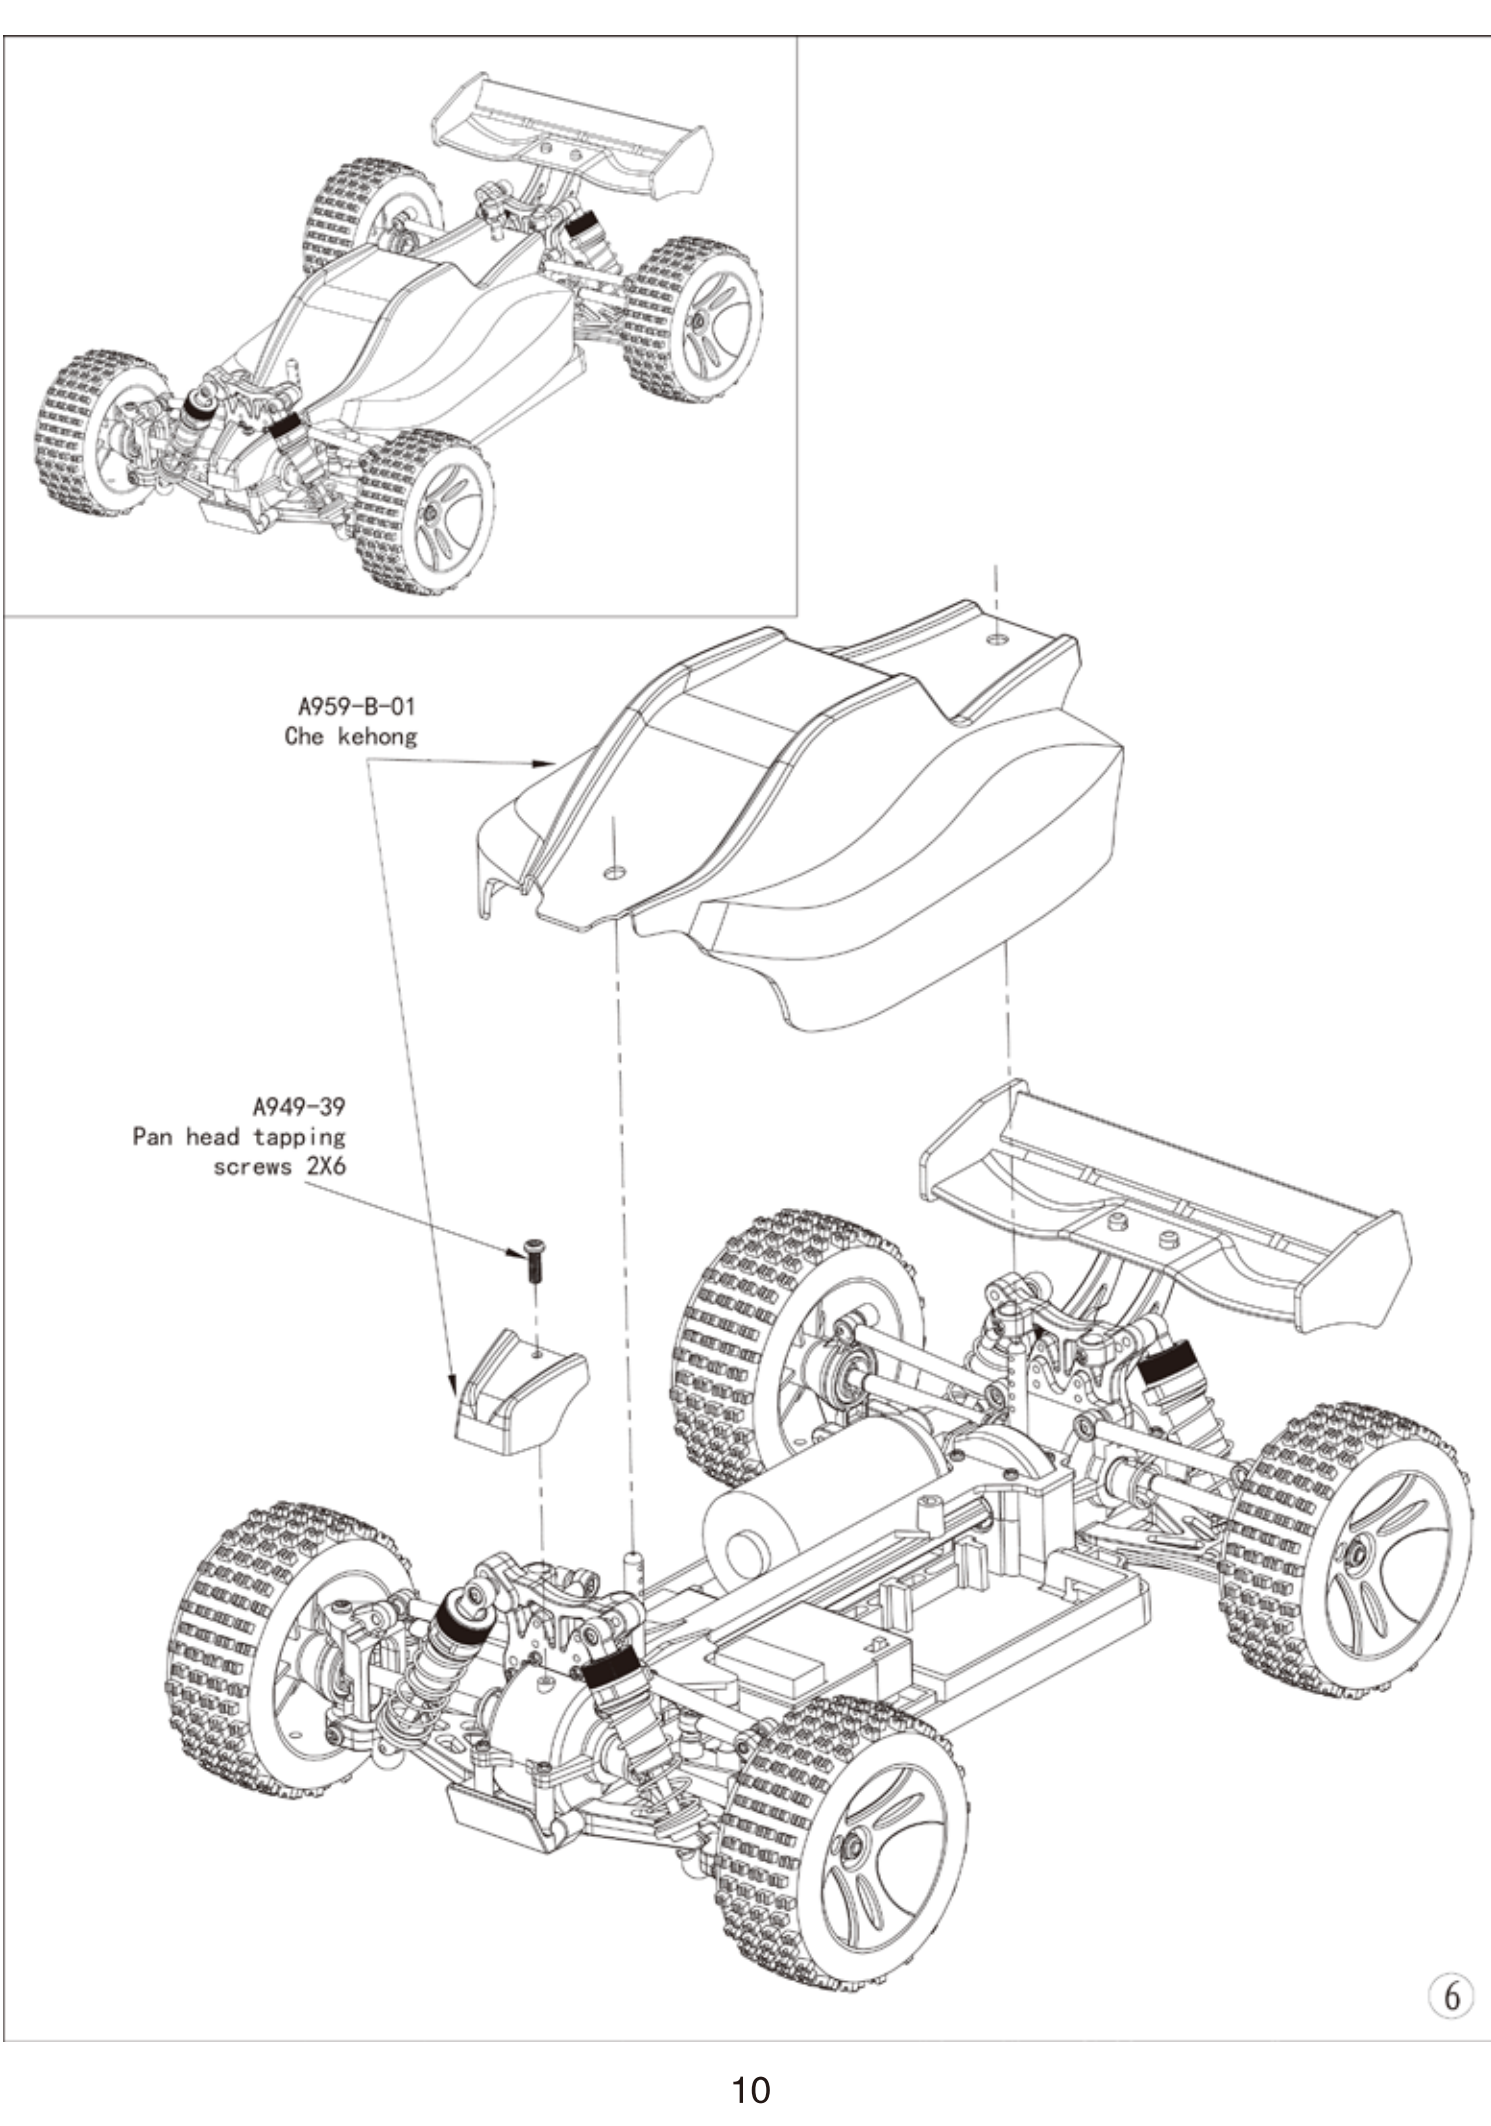

A959-B-01  
Che-ke-hong

A949-09  
Pan head tapping screws 2X6

A949-09  
Pan head tapping screws 2X6


A949-09  
Pan head tapping screws 2X6

A949-09  
Pan head tapping screws 2X6

A949-09  
Pan head tapping screws 2X6

10

### Sale parts view

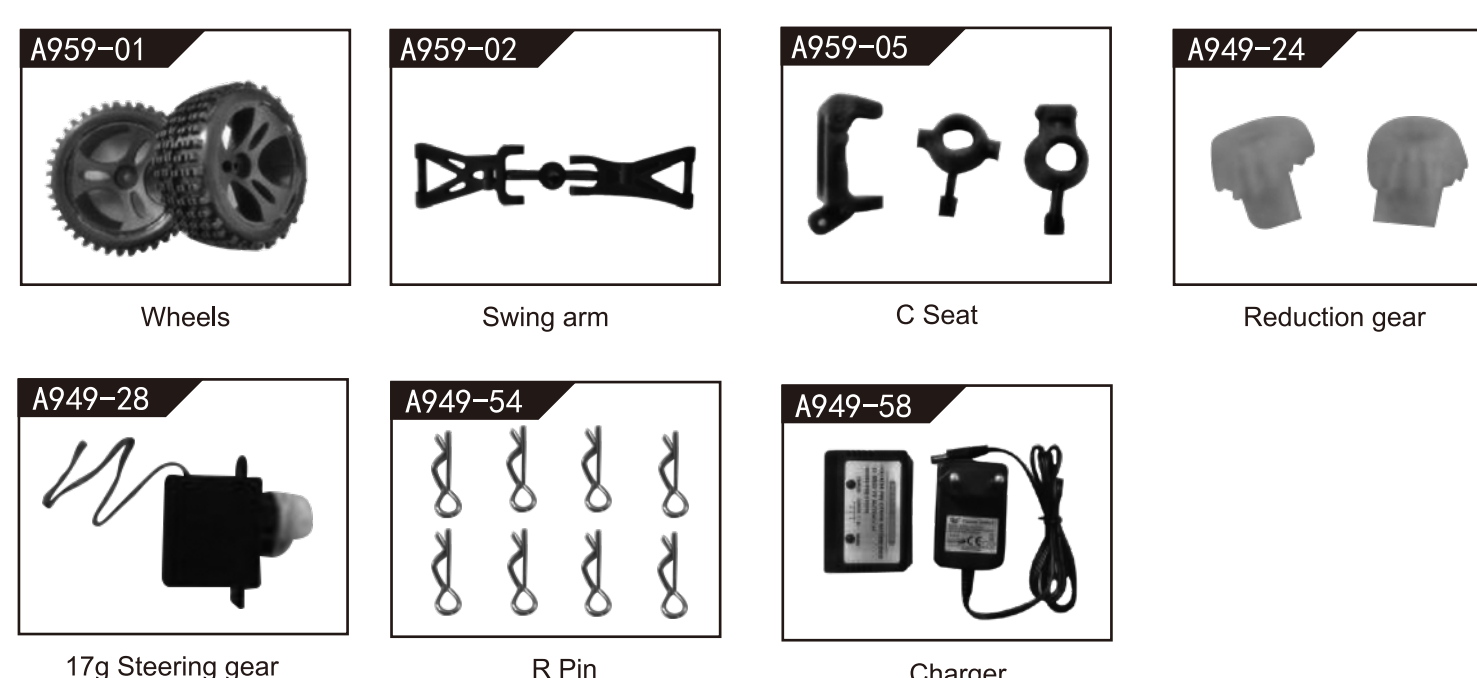 

Wheels, Swing arm, C Seat, Reduction gear, 17g Steering gear, R Pin, Charger

11