


90mm Waste Installation Instructions




1 YEAR GUARANTEE

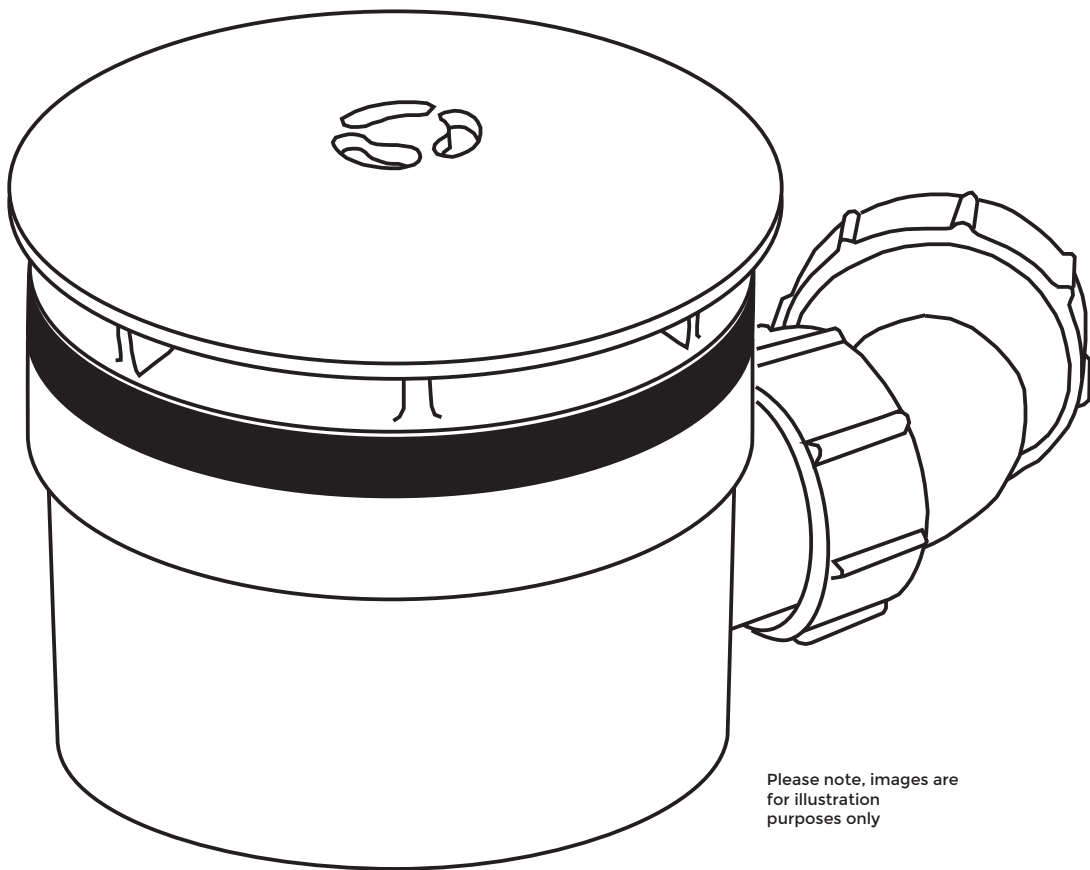


Please note, images are
for illustration
purposes only

INSTRUCTIONS


1

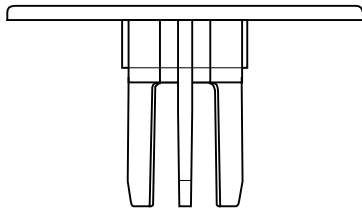



The trap provides a flow rate of 42 litres per minute when tested in accordance with EN274-2:2002. The flow rate can be seriously impaired if an adequate fall is not maintained throughout the length of the waste pipe.

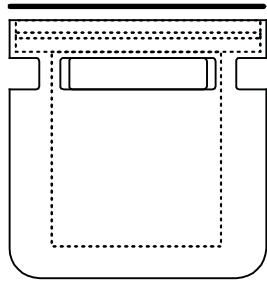

In order to maintain a high performance flow rate, two sealing washers are supplied. If the thickness of the waste outlet hole, 'X', measures over 6mm, the thinner washer, C¹, should be used. If less than 6mm, use the thicker washer, C².

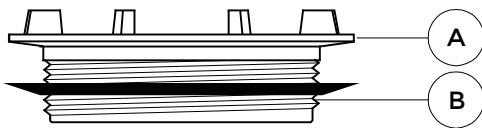

Install trap into shower tray by assembling parts A, B, C, D, and E as illustrated.

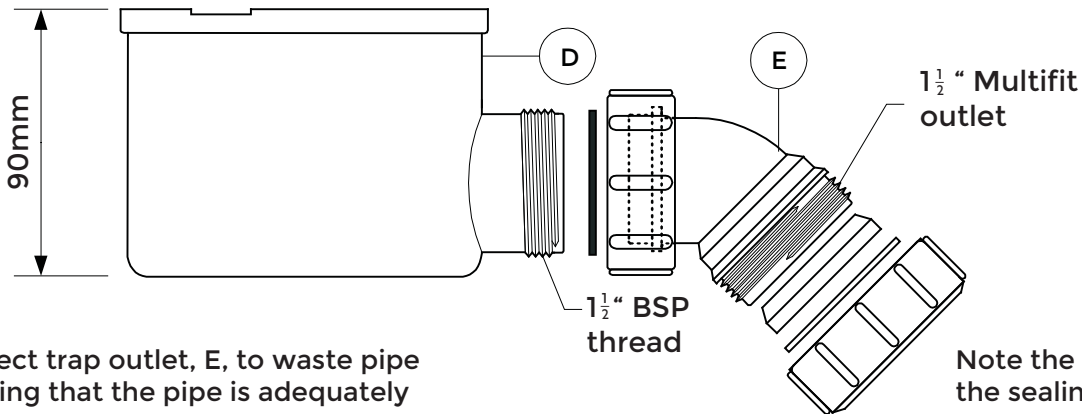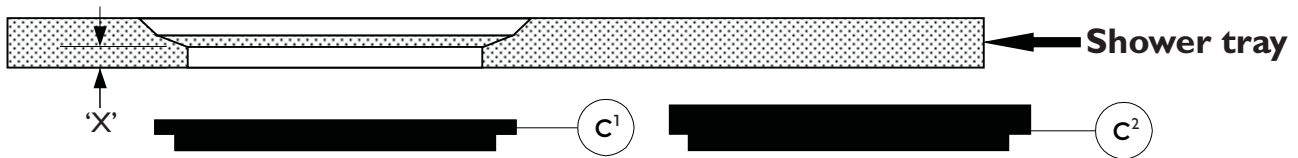


Connect trap outlet, E, to waste pipe ensuring that the pipe is adequately supported.



Note the order and position of the sealing washers. Failure to do so can result in water leakage.

Test the installation for leaks and performance.

2

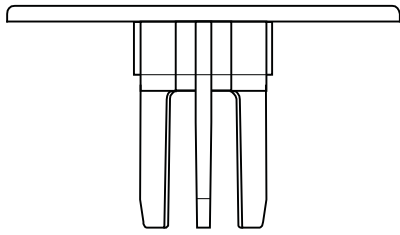

Insert cup and trap assembly, F. Push down firmly to ensure trap is in bottom position (approximately 10mm down from top of section 'A'). Finally insert flange into waste.

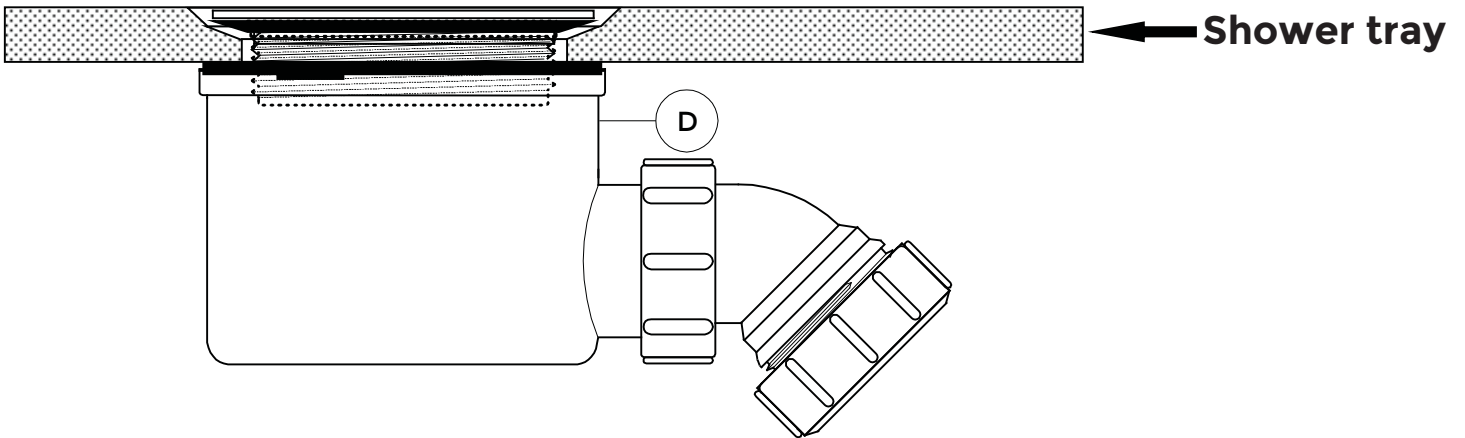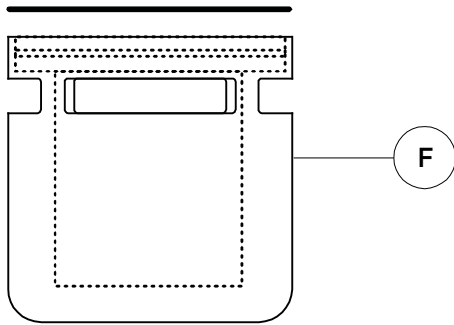

Aftercare / Cleaning

Regular maintenance is essential to retain a high performance flow rate. Remove the flange, cup and trap assembly, F, and thoroughly clean all parts. Flush through the trap body with clean water and carefully replace the parts ensuring the cup is fully pushed down into trap body.

We have taken great care to ensure that this product reaches you in good condition. However, should any parts be damaged or missing, please contact your point of purchase. This does not affect your statutory rights. In addition, if you require replacement parts, your point of purchase will be happy to assist.