



3. Disable direct hazards / safety regulations

Access to the battery





Pull the release lever to unlatch the hood. The hood should pop open slightly.



Raise the hood slightly, push the secondary latch up (1) inside of the hood center and lift the hood (2)







1) Turn the ignition switch off





③ Disconnect the positive(+) terminal

4. Access to the occupants

Glass 1 : Laminated 2-5 : Tempered



Vehicle body

Hardened Steel

5. Stored energy / liquids / gases / solids

Fuel Tank



Battery



ID No.	Version No.	Version date	Page
NLH-BC3-RSI-01-202104	01	04/2021	3 of 4

