


Wickes

BRIDGE SINK MIXER INSTRUCTION MANUAL

W INST 15

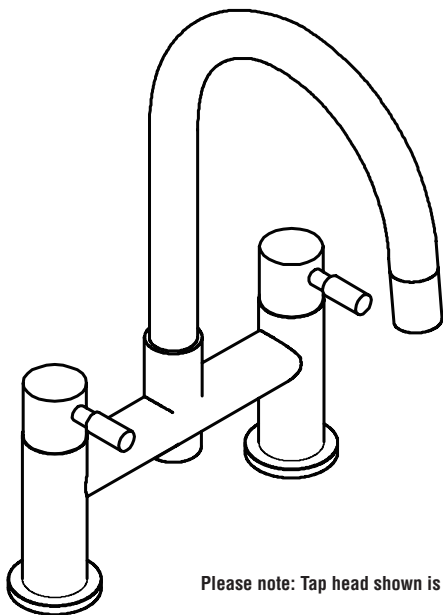

Please note: Tap head shown is for illustration purposes only.

CONTENTS

GUARANTEE

GENERAL SAFETY INSTRUCTIONS

PARTS SUPPLIED

HOW TO INSTALL

AFTER CARE

GUARANTEE

All products parts are manufactured to the highest standard and are covered by a 10 year manufacturing guarantee. This does not effect your statutory rights.

GENERAL SAFETY INSTRUCTIONS

Prior to drilling into walls, check there are no hidden electrical wires, cables or water supply pipes with the aid of an electronic detector. Always wear protective equipment such as safety glasses and hearing protection whilst using power tools.

PARTS SUPPLIED

LIST

Tap Body & Valve	1 SET
------------------	-------

Flange	x 2
--------	-----

Washer(Anti-Rotational)	x 2
-------------------------	-----

Washer	x 2
--------	-----

Fixing Nut	x 2
------------	-----

Spout	x 1
-------	-----

HOW TO INSTALL

BEFORE YOU START


If the tap is installed into a low pressure (tank fed) system, the minimum height from the outlet of the nozzle to the underside of the water tank, should be at least 2 metres to ensure adequate performance.

This product must be connected to the water supply in accordance with the Water Supply (Water Fittings) Regulations 1999, and also to comply with UK Building Regulations. If you are in any doubt about these requirements, contact a qualified plumber, your local Water Company or the Water Regulations Advisory Service (WRAS).

- Identify all components and check pack contents.
- TURN OFF WATER MAINS SUPPLY.** The mains stopcock is usually situated where the supply enters the building.
- It is also recommended that the water heating arrangements are turned off.
- Isolate the hot and cold supply pipes and drain both water systems. It is recommended you ensure complete drainage and that all taps are open. There is no need to drain the heating system.

FITTING INSTRUCTIONS

1. Remove Grub Screw from spout using Allen Key. Insert Spout (6) into Tap body (1). Rotate the Spout (6) carefully until hole in rear of body lines up with hole in spout. Insert Grub Screw and tighten.
2. Check that Anti-rotational washer (3) is fitted to flange (2). Fit the Flange (2) to the Tap body, and then fit Tap Body (1) to bath.
3. Fixing Washer (4) over inlet legs. Then fit Fixing Nut (5) to the inlet legs and tighten. **DO NOT OVERTIGHTEN**
4. Connect to water supply using suitable plumbing joints.
5. Turn on the water supply and re-fill the system. Check immediately for leaks. It is always advisable at this stage to flush out the system. To do this, open both valves fully and allow water to flow for approximately 1 minute. This will remove any foreign matter within the tap body.
6. Finally turn on all the water heating arrangements.

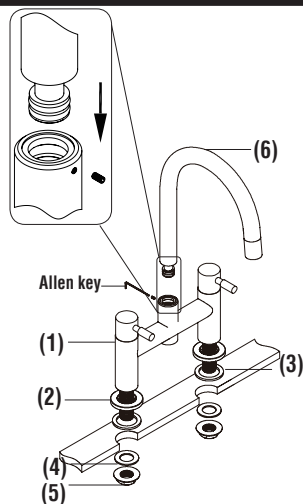

Please note:
Tap head shown is for illustration purposes only.

AFTER CARE

Your fitting has a high quality finish and should be treated with care to preserve the visible surfaces. All surfaces will wear if not cleaned correctly. The only safe way to clean your fitting is to wipe with a soft damp cloth using clean soapy water. Stains can be removed using a little washing up liquid. Do not use any other cleaning materials (even non-scratch type) as these will affect the visible surface.

Do not use abrasive cloths or wire cleaners.

If the cloth used to clean the tap has previously been used with a cleaner that contains bleach, take special care to thoroughly rinse the cloth with clean water before use.

Wickes

Wickes Building Supplies LTD
Lodge Way House, Lodge Way
Harlestone Road
Northampton NN5 7UG
Customer service number : 0330 1234 123

W INST 15 (Rev. 1.2)