

Wickes

PLANER

900W



PPL900B.1
223739

CONTENTS

GENERAL POWER TOOL SAFETY WARNINGS 3

COMPONENT LIST 5

ACCESSORIES 6

SYMBOLS 6

TECHNICAL DATA 6

NOISE INFORMATION 7

OPERATING INSTRUCTIONS 8

MAINTENANCE 13

ENVIRONMENTAL PROTECTION 13

PLUG REPLACEMENT (ONLY FOR REWIRABLE PLUG OF UK & IRELAND) 13

DECLARATION OF CONFORMITY 14

ORIGINAL INSTRUCTION

GENERAL POWER TOOL SAFETY WARNINGS

 **WARNING!** Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1. WORK AREA SAFETY

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2. ELECTRICAL SAFETY

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

3. PERSONAL SAFETY

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.

4. POWER TOOL USE AND CARE

- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from**




GENERAL POWER TOOL SAFETY WARNINGS

- the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*
- d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
 - e) Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
 - f) Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
 - g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*
 - h) Keep handles and grasping surfaces dry, clean and free from oil and grease.** *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*
- 5. SERVICE**
- a) Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*

PLANER SAFETY WARNINGS

- 1. Wait for the cutter to stop before setting the tool down.** *An exposed rotating cutter may engage the surface leading to possible loss of control and serious injury.*
- 2. Hold the power tool by insulated gripping surfaces only, because the cutter may contact its own cord.** *Cutting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.*
- 3. Use clamps or another practical way to secure and support the workpiece to a stable platform.** *Holding the workpiece by your hand or against the body leaves it unstable and may lead to loss of control.*

COMPONENT LIST

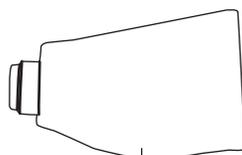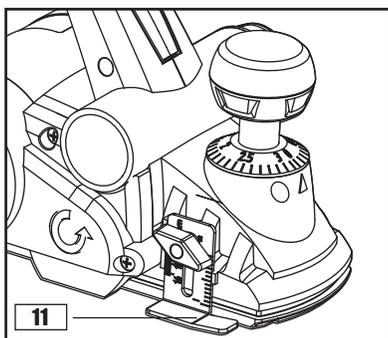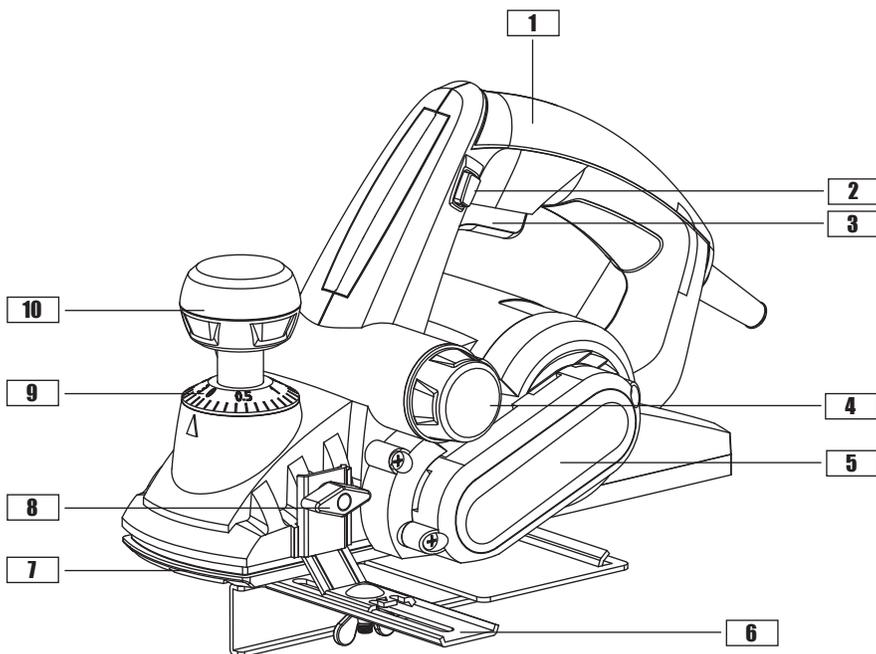

- 1** Hand grip areas
- 2** Lock-off button
- 3** On/off switch
- 4** Dust extraction cover
- 5** Belt cover
- 6** Parallel guide
- 7** Base plate

- 8** Parallel guide locking screw
- 9** Planing depth scale
- 10** Cutting depth adjustment knob
- 11** Rebate guide
- 12** Spanner
- 13** Dust bag

ACCESSORIES

Parallel guide	1
Rebate guide	1
Dust bag	1
Spanner	1
82mm blades(on machine)	2

We recommend that you purchase your accessories from the same store that sold you the tool. Use good quality accessories marked with a well-known brand name. Choose the type according to the work you intend to undertake. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

SYMBOLS



To reduce the risk of injury, read all of this instruction manual



Wear dust mask



Warning



Double insulated



Wear ear protection



Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities or retailer for recycling advice.



Wear eye protection

TECHNICAL DATA

Rated Voltage	220-240V~50/60Hz
Rated Power	900W
Rated No-load speed	16000 /min
Max cutting depth	3 mm
Max cutting width	82 mm
Max rebate depth	16 mm
Machine weight	2.8 Kg
Protection class	□ / II

NOISE INFORMATION

A weighted sound pressure

A weighted sound power

K_{pA} & K_{wA}

Wear ear protection.

L_{pA} : 80dB(A)

L_{wA} : 91dB(A)

3.0dB(A)

VIBRATION INFORMATION

Vibration total values (triax vector sum) determined according to EN 62841:
Vibration emission value $a_{hB} = 5.20 \text{ m/s}^2$
Uncertainty $K = 1.5 \text{ m/s}^2$

The declared vibration total value and the declared noise emission value have been measured in accordance with a standard test method and may be used for comparing one tool with another.

The declared vibration total value and the declared noise emission value may also be used in a preliminary assessment of exposure.

! **WARNING!** The vibration and noise emissions during actual use of the power tool can differ from the declared value depending on the ways in which the tool is used especially what kind of workpiece is processed dependant on the following examples and other variations on how the tool is used:

How the tool is used and the materials being cut or drilled.

The tool being in good condition and well maintained.

The use of the correct accessory for the tool and ensuring it is sharp and in good condition.

The tightness of the grip on the handles and if any anti vibration and noise accessories are used.

And the tool is being used as intended by its design and these instructions.

This tool may cause hand-arm vibration syndrome if its use is not adequately managed.

! **WARNING!** To be accurate, an estimation of exposure level in the actual conditions of use should also take account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle but not actually doing the job. This may significantly reduce the exposure level over the total working period, helping to minimize your vibration exposure risk.

Always use sharp chisels, drills and blades.

Maintain this tool in accordance with these instructions and keep well lubricated (where appropriate).

If the tool is to be used regularly then invest in anti vibration and noise accessories.

Plan your work schedule to spread any high vibration tool use across a number of days.

OPERATING INSTRUCTIONS



NOTE: Before using the tool, read the instruction book carefully.

Intended Use

The machine is intended for planing of firmly supported wooden materials, such as beams and boards. It is also suitable for beveling edges and rebating.

1. ON / OFF SWITCH (See Fig. A)

The switch is locked off to prevent accidental starting. To operate: depress the lock off button (2) then the on/off switch (3) and release the lock off button (2). To switch off, just release the on/off switch (3).

WARNING! Danger of kickback! Apply the machine to the workpiece only when switched on and up to speed.

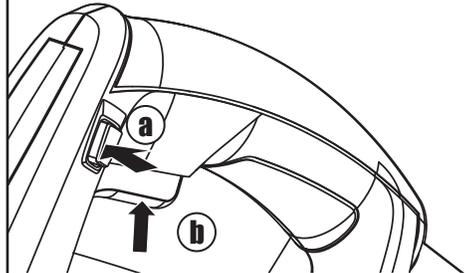


Fig. A

2. CUTTING DEPTH ADJUSTMENT (See Fig. B)

The planing depth can be adjusted from 0 to 3mm. Rotate the cutting depth adjustment knob (10) to set the required cutting depth with the scale (9). The clockwise rotation increases the planing depth; the anticlockwise rotation reduces the planing depth. Always work from a rough cut to a finish cut.

It is recommended that test cuts be made in scrap wood after each adjustment to make sure that desired amount of wood is being removed by your planer.

NOTE: To protect blades during storage, transporting, etc., set blade depth adjustment knob to 0.

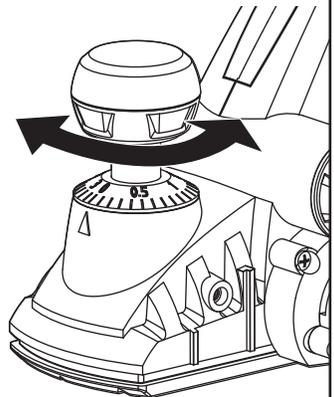


Fig. B

3. STANDARD SURFACE PLANING

Set the desired cutting depth. Position the front part of the base plate flat onto the work surface. Make sure that the blades are not touching the workpiece. Switch the machine on and push your planer forward and it will start cutting. Always maintain all of the base plate flat on the work surface to prevent the cutting blade jumping. Move the planer evenly over the work surface. Be careful to avoid hitting nails during operation. It could nick, crack, or damage blades. We suggest that you always keep an extra set of blades on hand for replacement.

4. EDGE CHAMFERING (See Fig. C)

! **CAUTION: Danger of kickback!** Always grip the machine with both hands. Maintaining good control will help avoid the risk of serious personal injury. The workpiece must always be properly supported and clamped so that both hands will be free to control the planer.

Using the V-groove (A) in the base plate (7) you can make a chamfer on the work piece edge. Guide the planer along the edge and maintain a constant angle and force to produce a good finish. You can control the angle of the chamfer with your hands. Make a test chamfer on a scrap piece of wood. Maintain downward pressure to keep your planer flat at the beginning and the end of the work surface.

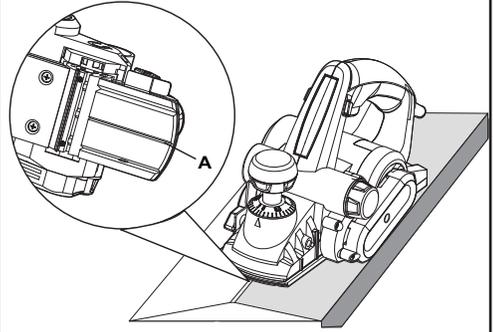


Fig. C

5. USING THE PARALLEL GUIDE (See Fig. D)

Insert the screw provided through the hole on the support of parallel guide (B). Turn the screw into the nut on the housing. Fix the parallel guide (6) on the support of parallel guide with the screw and nut. Ensure the screws are tightened securely.

NOTE: The parallel guide should be fitted on the left of housing.

To adjust the required width of cut, loosen the nut and slide the parallel guide (6) to the required position. Retighten the nut fully.

Use the parallel guide (6) while cutting. The guide should be held firmly against the edge of the workpiece.

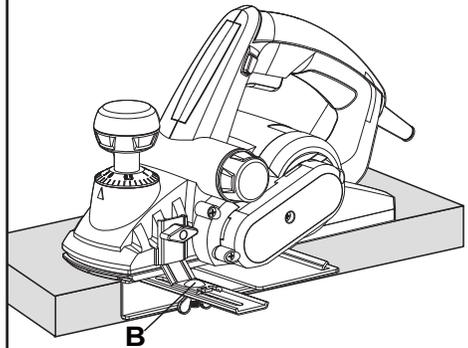


Fig. D

6. USING THE REBATE (See Fig. E)

Insert the screw provided through the slot on the rebate (11). Turn the screw into the nut on the housing. The cut depth adjustment can be set from 0 to 16mm. To adjust the depth of cut, place the planer on a flat board, then loosen the screw and slide the cut depth adjustment guide up and down for required depth. Tighten the thumb screw fully.

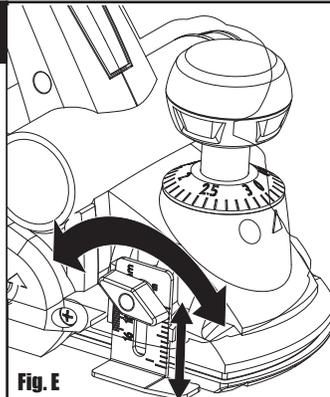


Fig. E

7. REBATING (See Fig. F)

The width of rebating cut (C) is adjustable by moving the parallel guide (6). The depth of rebating cut (D) is determined by moving the rebate (11), and the number of passes made along the workpiece. Make sure that the planer is guided with a lateral supporting pressure.

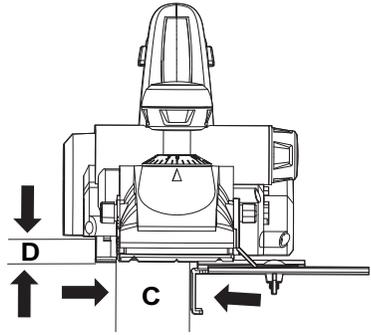


Fig. F

8. BLADE FITTING AND CHANGING (See Fig. G1-G4)

NOTE: Dull and worn blade cannot be reground and must be replaced. Always replace blades in pairs.

WARNING! Remove power cord from the socket before carrying out any adjustments or changing blades. Always put on gloves when replacing blades. Using the blade spanner provided to loosen the three installation screws approximately 1/2 rotation anticlockwise.

NOTE: Do not over-loosen the screws. If the screws are too loose, the alignment of the new blade will not be accurate.

Before removing the old blades, take notice of the direction of cut as well as how the tapered edge of the old blades are oriented. The tapered edge of the new blades must be in the same orientation as the original blades. Press the safety cover down with your finger. Push the blade out with the tip of a spanner (or a screwdriver) and then remove.

NOTE: There is no need to remove the blade clamp as this will change the factory settings for cutting blade height control.

NOTE: If a blade cannot be pushed out easily after loosening the screws, use a piece of wood to break the blade loose from the blade clamp, with a short sharp blow. Then push with a screwdriver to remove the blades. If necessary, tap the piece of wood sharply with a small hammer to break the blades loose.

Before reinserting a new or reverse blade, always clean both the blade and the blade seat if dirty. Slide the blade into the clamp with a spanner (or a screwdriver) in the correct orientation. Check the blade is level with the clamp. Retighten the three blade screws with the spanner.

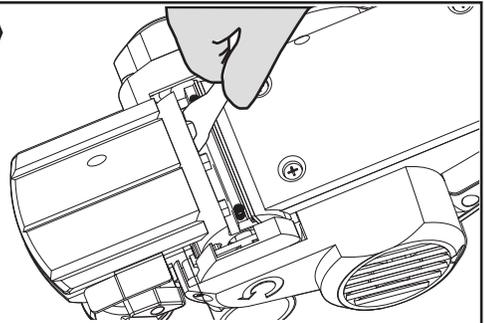


Fig. G1

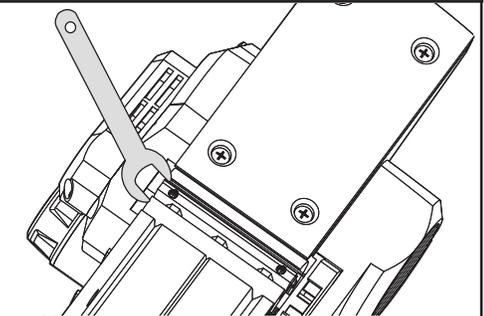


Fig. G2

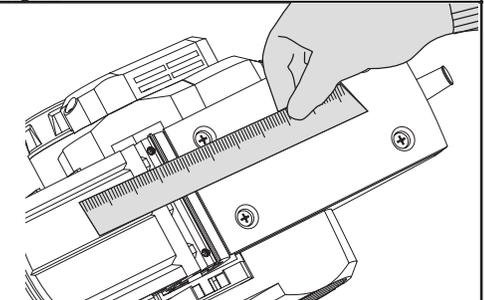


Fig. G3

Repeat the above procedure to change the other blade. After the blades are replaced, use a ruler to check if the blades are parallelled with the rear base plate. If not, you can adjust the blades with the hexagonal wrench provided. Firstly loosen the three screws on the blade clamp. Turn the socket head screw clockwise, the blade will be risen. Turn it anticlockwise, the blade will be lowered down. Finally retighten the three screws fully.

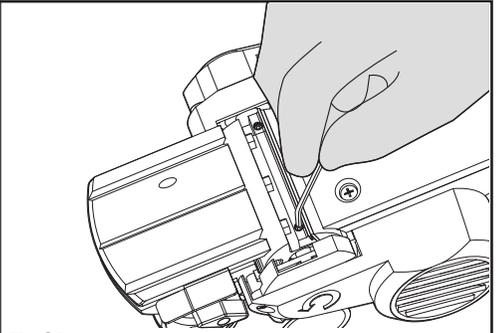


Fig. G4

9. REPLACING A DRIVE BELT (See Fig. H1,H2)

- WARNING!** 1. Remove the plug from the socket before carrying out any adjustment, servicing or maintenance.
2. Ensure the cutting blades have stopped turning and cannot cause injury.
3. Always wear gloves when maintaining, adjusting or using your planer.

Loosen the screws (E) and remove the belt cover. Remove the worn drive belt from the large pulley and the pinion and clean them. Place the new belt on the top of the pinion and turn it manually, press it on the large pulley. Make sure that the drive belt runs exactly along the length grooves of the pinion and the pulley. Replace the belt cover. Install the cover screw and tighten fully.

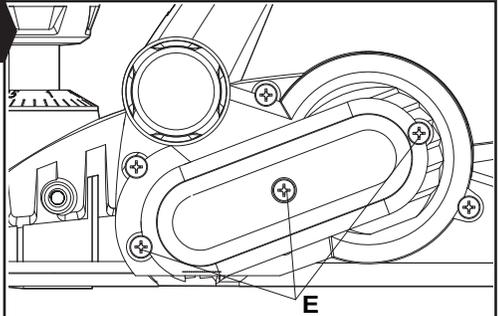


Fig. H1

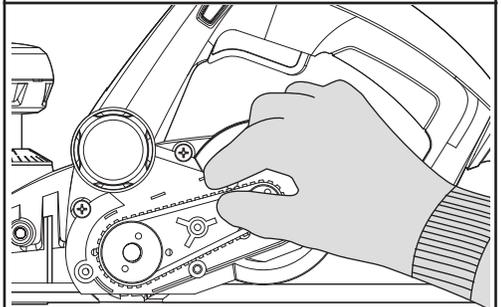


Fig. H2

10. CORRECT PLANER BLADE SETTING (See Fig. I)

Your planing surface will end up rough and uneven, unless the blade is set properly and securely. The blade must be mounted so that the cutting edge is absolutely level, that is, parallel to the surface of the rear base. Fig. I shows some examples of proper and improper settings.

(A) Front base (Moveable shoe)
(B) Rear base (Stationary shoe)

1) CORRECT SETTING

Although this side view cannot show it, the edges of the blade run perfectly parallel to the rear base surface.

2) NICKS IN SURFACE

CAUSE: one or both blades fails to have edge parallel to rear base line.

3) GOUGING AT START

CAUSE: one or both blade edges fails to protrude enough in relation to rear base line.

4) GOUGING AT END

CAUSE: one or both blade edges protrude too far in relation to rear base line.

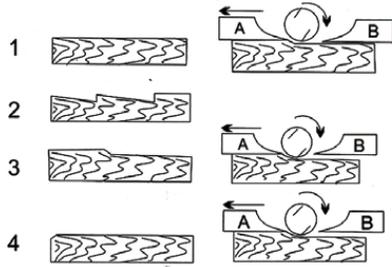


Fig. I

11. FITTING A DUST BAG (See Fig. J)

This accessory can be fitted by sliding the dust bag inlet over the planer dust extraction tube as far as possible. The dust bag (13) will reduce the efficiency of the exhaust system and the bag must be emptied frequently to maintain the efficiency. Chips are ejected from the right side of the machine only.

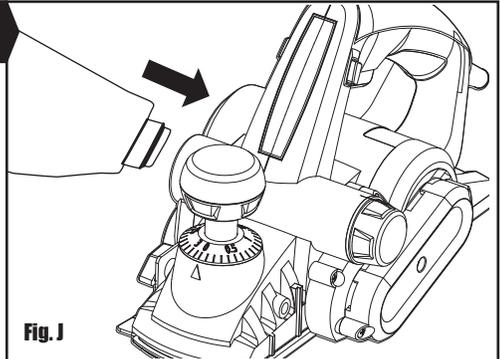


Fig. J

12. EXTERNAL DUST EXTRACTION

The dust extraction tube is best connected to a suitable external dust extraction machine e.g. vacuum cleaner. Chips are ejected from the right side of the machine only. Use of vacuum extraction does not negate the need to wear personal protective equipment, especially respiratory protective equipment.

MAINTENANCE

Remove the plug from the socket before carrying out any adjustment, servicing or maintenance.

There are no user serviceable parts in your power tool. Never use water or chemical cleaners to clean your power tool. Wipe clean with a dry cloth. Always store your power tool in a dry place. Keep the motor ventilation slots clean. Keep all working controls free of dust. Occasionally you may see sparks through the ventilation slots. This is normal and will not damage your power tool.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

ENVIRONMENTAL PROTECTION



Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities or retailer for recycling advice.

PLUG REPLACEMENT (ONLY FOR REWIRABLE PLUG OF UK & IRELAND)

If you need to replace the fitted plug then follow the instructions below.

IMPORTANT

The wires in the mains lead are colored in accordance with the following code:

Blue = Neutral

Brown = Live


As the colors of the wires in the mains lead of this appliance may not correspond with the colored markings identifying the terminals in your plug, proceed as follows. The wire which is colored blue must be connected to the terminal which is marked with N. The wire which is colored brown must be connected to the terminal which is marked with L.



WARNING:

Never connect live or neutral wires to the earth terminal of the plug. Only fit an approved 13A BS1363/A plug and the correct rated fuse.

Note: If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent engaging into a socket.

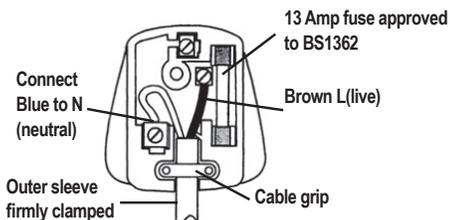

DECLARATION OF CONFORMITY

We,
Wickes Building Supplies Limited

Declare that this product: PLANER

Description and SKU code: 223739

Complies with the following Directives and Regulations:

2006/42/EC, Machinery Directive

2014/30/EU, Electromagnetic Compatibility Directive

2011/65/EU & (EU)2015/863 (RoHS), Restriction of Hazardous Substances Directive

and conforms to the following standards:

Standards specific to this product:

EN 62841-1


EN 62841-2-14

EN 55014-1

EN 55014-2

EN 61000-3-2

EN 61000-3-3

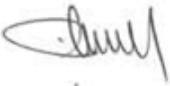

28th January, 2021

Philip Ansell

Category Technical Manager

Wickes

Vision House

19 Colonial Way

Watford

WD24 4JL"

Customer Helpline 0345 2005409