

600 and 900 Mid Height Bridging Wall Unit Assembly



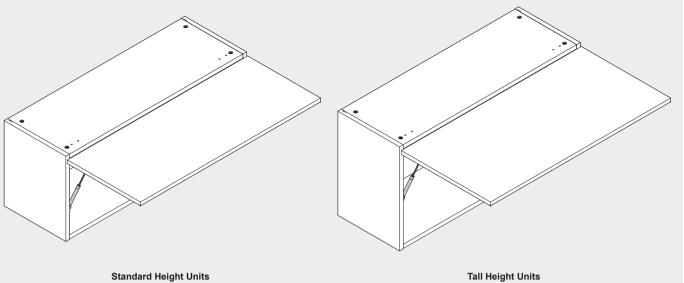

Components B B A

Important Information - True Handleless Kitchens Installers: See Note Above @

Caution: Some pieces of hardware could be hazardous to small children. Keep all these items out of reach and do not leave children unattended in the assembly area.

Please read these instructions carefully before proceeding. Refer to the Guide to Receiving and Installing your Kitchen booklet for further information.

Note: Due to variation in wall conditions no screws are supplied for fixing the units to the wall. If in doubt consult an expert. Assemble the unit on a clean solid work surface.

In the interest of continuing improvements we reserve the right to amend or adjust the specifications without prior notice. Errors and omissions excepted.

Every effort has been made to ensure that this product leaves the factory in perfect condition. In the unlikely event that an item is damaged or incorrect, please contact the customer services department.




FM 665131

Note - Fitting Handles: (1) Decide where you are going to position each handle to maintain symmetry around your kitchen. (2) Measure the handle centres and mark off each door/drawer position. (3) Drill through the door/drawer using a fine drill (<2.5mm), then drill back from the rear face using a 4.5mm drill. (4) Attach with the fixings provided with your handle.

Tools Required Quantity Quantity Ref. No. Item Ref. No. Item Quantity Ref. No. Item Stay arm kit 3.5x12mm 150101 154016 1/2 each containing 152181 150126 154082 8 G-Clamp Drill (pair) 2 152162 154085 8 LH - 152246 8 154004 Medium Crosshead RH - 152247 Screwdriver Hammer 150308 2 (Not required) LH - 152248 150309 Pair RH - 152249 Large Flathead 2 152148 Screwdriver Tape Measure 152201 151101 2 151999 mmm Spirit Level Bradawl

(3)

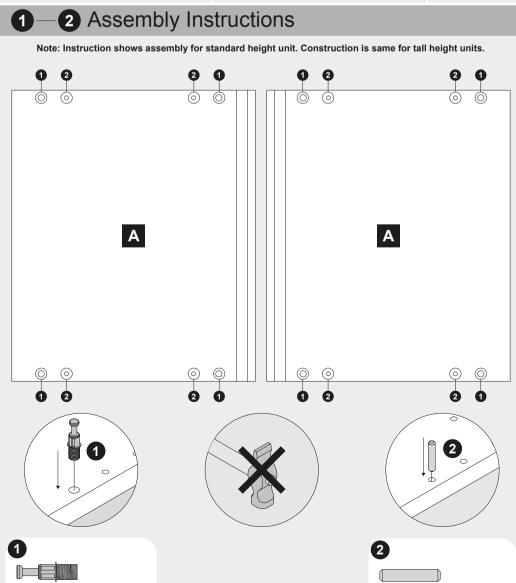

154004

154082

8

